


LEM-1DL/C

Multi-Master Access Sentry System

Master Station for Multiple Master Use, including Occupied Lamp

Please read and understand all instructions before installation.

- INSTRUCTIONS -

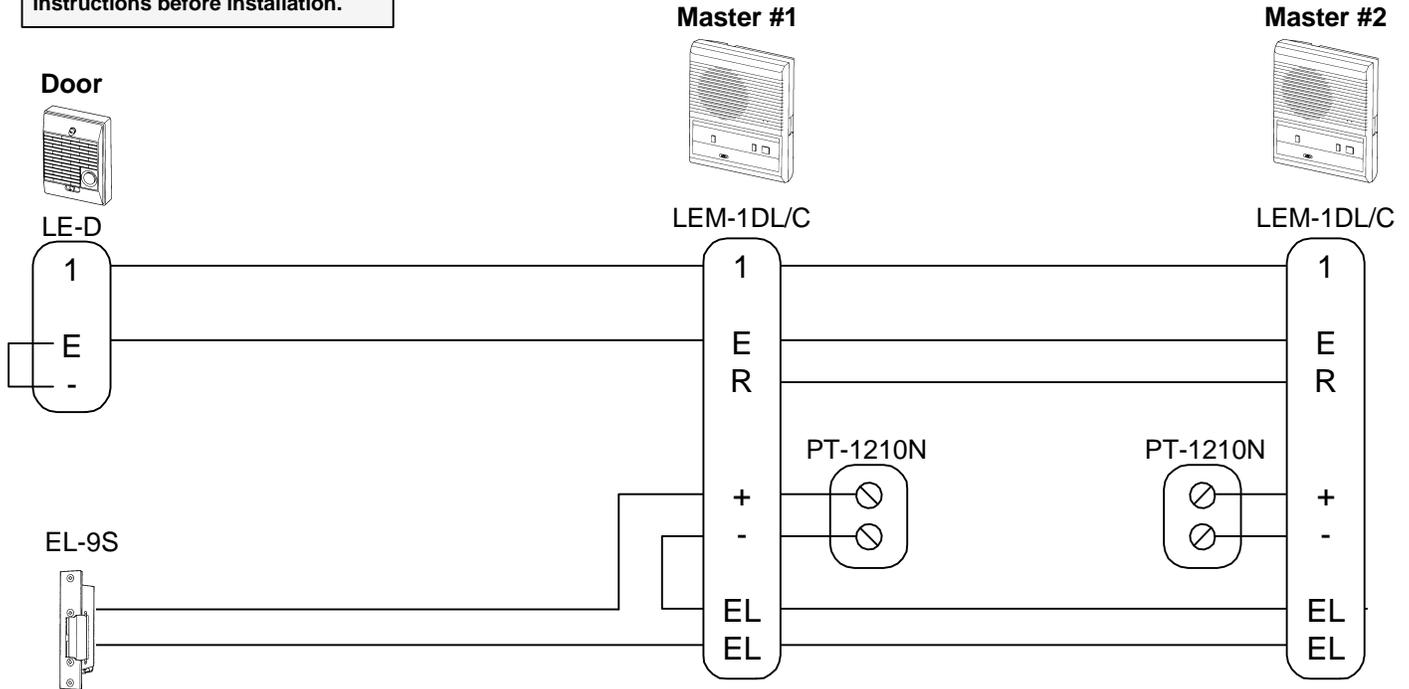

IMPORTANT!!!

Each master **REQUIRES** an individual PT-1210N power supply.

OPERATION NOTES:

1. Only one master can be used at a time.
2. When the answering master presses the TALK button, the red LED above the OFF switch will light on both masters.
This feature is controlled by the "R" wire between masters.
3. When the OCCUPIED light is illuminated, do not press the TALK button on the non-answering master, or a feedback will be heard throughout the system. If this occurs, turn off one of the masters (depress OFF button). At that time, communication between the door and the answering master can continue normally.
4. There is no communication between masters.

INSTALLATION GUIDELINES:

1. Separate power supplies (12-16V AC or 12-24V DC) are required at each master station. DO NOT CONNECT +/- WIRES BETWEEN MASTERS.
2. The door strike can be powered from one of these power sources (as shown) or from an independent source. Door release contact rating on the LEM-1DL/C is 24V DC, 1A max.
3. The EL-9S is designed for a standard wood framed door, and for light to medium usage. If a different type of door is used, install a strike appropriate for that door.
4. The LEM-1DL/C provides a "normally open" contact closure for door release.
5. If a magnetic lock is used, the door release contacts can be modified to "Normally Closed". On PC board of LEM-1DL/C, locate and remove jumper JP03 (near door release switch). Install a jumper in the position labeled JP02.

Aiphone Communication Systems
1700 130th Ave. N.E.
Bellevue, WA 98005
(425) 455-0510
FAX (425) 455-0071

TOLL FREE TECHNICAL SUPPORT:

(800) 692-0200
TOLL FREE FAX LINE:
(800) 832-3765
E-MAIL: tech-serv@aiphone.com

LEM-1DL/C Instr.
0998bkjd