


DANGER AT OCEAN DEEP

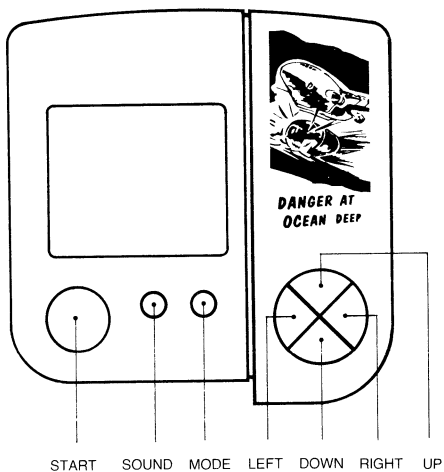

SOUND EFFECTS: You may choose between having sound effects or not by pressing the 'SOUND' button at Game Start mode...symbol will light up if sound effects are selected.

LEVELS : With 2 selective levels.

BATTERY : Require one button cell. Your game has one free battery included. Please ask an adult to change the battery when it needs replacing.

GAME PLAY

- To enter the Game mode from demonstration mode press 'MODE' button once.
- Press 'MODE' button twice to enter Super Game.
- Press 'START' button to start the game.

