

2006 **QUEST**

QUICK REFERENCE GUIDE



SHIFT_convention



OUTSIDE MIRROR CONTROL

HEADLIGHT CONTROL

01 LIGHTS ON DEMAND

02 STEERING WHEEL SWITCHES
FOR AUDIO CONTROL

REAR SONAR SWITCH

STEERING WHEEL
TILT ADJUSTMENT
(BEHIND STEERING WHEEL)

03 CRUISE CONTROL

WINDSHIELD WIPER/
WASHER CONTROLS

DISPLAY SCREEN

04 TIRE PRESSURE
MONITORING SYSTEM

05 TRIP BUTTON

06 AUDIO SYSTEM

07 CLIMATE
CONTROLS

01 LIGHTS ON DEMAND

The **LIGHTS ON DEMAND** switch allows the driver to select one of three lighting modes for the interior lights and puddle lamps (if so equipped): on, door, off.



Push the top portion of the switch and the interior lights and puddle lamps will illuminate; they will turn off automatically after 30 minutes, to prevent the battery from becoming discharged.



If the **LIGHTS ON DEMAND** switch is in the neutral position, the lights will stay on for about 30 seconds when:

- The doors are unlocked by the keyfob, a key, or the power door lock switch while all doors are closed and the ignition switch is in the OFF position.
- The driver's door is opened and then closed while the key is removed from the ignition switch.
- The key is removed from the ignition switch while all doors are closed.

The interior lights and puddle lamps (if so equipped) will turn off while the 30-second timer is activated when:

- The driver's door is locked by the keyfob, a key, or the power door lock switch.
- The ignition switch is turned on.

The lights will turn off automatically after 30 minutes while the doors are open to prevent the battery from becoming discharged.

OFF Push the bottom portion of the switch and the interior lights and puddle lamps (if so equipped) will be turned off.

- The lights can be turned off so sleeping passengers are not disturbed when the doors are opened.
- The lights on the front doors will turn on when the front doors are opened.



02 STEERING WHEEL SWITCHES FOR AUDIO CONTROL (if so equipped)

- To turn steering wheel audio system on, push **POWER**.

- Push the **MODE** button to change the mode in the following sequence: Preset radio station bank (A or B or C) → CD (if a CD is in the player) → SAT (if equipped) → DVD (if equipped).

DVD will show in the display even if there is no DVD in the player.

- The $\hat{\vee}$ switch can be used to perform the following:
 - Push the $\hat{\vee}$ switch for less than 1.5 seconds to change to the preset station.
 - Push the $\hat{\vee}$ switch for more than 1.5 seconds to seek to the next broadcasting radio station.
 - Push the $\hat{\vee}$ switch while playing a CD for less than 1.5 seconds to change programs on the CD.
 - If the vehicle is equipped with a 6 Disc CD changer, push the $\hat{\vee}$ switch for more than 1.5 seconds to change between CDs.
- Push the **VOL** control switch \wedge or \vee to increase or decrease volume.



03 CRUISE CONTROL

- To initiate cruise control, push **ON**. (The **CRUISE** indicator light will illuminate.)
- To set a cruising speed, accelerate to the desired speed, push **COAST/SET** and release. (The **SET** indicator light will illuminate.)
- To set a faster or slower cruising speed:
 - Press on the brake or accelerator to attain the desired speed, push **COAST/SET**, and release.
 - Push and hold the **ACCEL/RES** switch to increase speed. Release the switch when the vehicle attains the desired speed. Push and release the **ACCEL/RES** switch to increase speed by about 1 MPH.
 - Push and hold the **COAST/SET** switch to decrease speed. Release the switch when the vehicle attains the desired speed. Push and release the **COAST/SET** switch to decrease speed by about 1 MPH.
- To resume a preset speed, push **ACCEL/RES** and release.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal. The **SET** indicator light in the instrument panel will go out.
- To turn off cruise control, push the main (**ON/OFF**) switch. Both the **CRUISE** indicator light and the **SET** light in the instrument panel will go out.



04 TIRE PRESSURE MONITORING SYSTEM (TPMS)

This system monitors tire pressure. Please remember, this system does not detect a sudden drop in tire pressure (for example, a blowout while driving). It also does not monitor the air pressure in the spare tire.



Tire pressure is affected by temperature. Low outside temperature causes lower tire pressure. This may cause the low tire pressure warning light to illuminate.


If the low tire pressure warning light comes on, check the tire pressure in all four tires. Adjust the low tire pressure to the recommended **COLD** tire pressure shown on the Tire and Loading Information label to turn the low tire pressure warning light off.

If TPMS is not functioning properly, the low tire pressure warning light will flash for approximately 60 seconds when the key is turned on. After 60 seconds, the light will remain on. Have the system checked by a **NISSAN** dealer.

05 TRIP BUTTON

When **TRIP** is pressed, the following modes will display on the screen:

- TRIP 1 – TIME, DIST, AVG
- TRIP 2 – TIME, DIST, AVG
- OFF

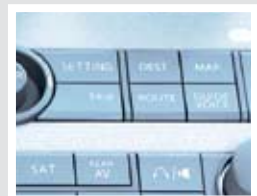

TRIP 1 or TRIP 2 record journey time, trip odometer and average speed.

To reset TRIP 1 and TRIP 2, use the joystick to select **RESET**; press **ENTER** or **TRIP** for approximately 2 seconds.



06 | AUDIO SYSTEM

01 SEEK/TRACK BUTTON

To scan quickly through each broadcasting station, press the **SEEK/TRACK** button. The tuner will pause for 5 seconds on each broadcasting station. To skip from one track to another on a CD, press the **SEEK/TRACK** button. Each time the button is pressed, the CD will advance or skip back one track.

02 TUNE/REW/FF BUTTON

To fast forward or rewind a track, press the **REW/FF** button. The disc will play at an altered speed until the button is released. To manually tune the radio, press the **TUNE** button.

03 PROG/RPT BUTTON

To change the play pattern of the CD, press the **PROG/RPT** button. To activate the Radio Data System (RDS), press the **PROG/RPT** button. RDS provides information about radio stations (type, call numbers, etc.)

04 PRESET A-B-C BUTTON

Press **PRESET A-B-C** button until you reach the desired setting. The radio is equipped with three separate banks of six station presets (18 total station presets). You may store any combination of AM, FM or SAT* radio presets on each bank.

05 CD PLAY BUTTON

To begin play, press the **CD** button.

06 REAR AV BUTTON

To turn the rear audio controls on, press the **REAR AV** button. Press again to turn rear controller off. To turn on the DVD mode (if so equipped), press and hold the **REAR AV** button for 2 seconds.

07 SPEAKER CONTROL BUTTON

To activate the rear headphones and turn off the rear speakers, press the **SPEAKER CONTROL** button. To deactivate the rear headphones, press the button again.

08 TUNING AND AUDIO CONTROL KNOB

To manually tune the radio, turn the **TUNE** knob. Adjust the bass, treble, fade, balance, and Speed Sensitive Volume (SSV) by pressing the **AUDIO** knob until the desired mode appears in the display. Then turn the **TUNE** knob to adjust to the desired level.

09 STATION AND CD SELECT BUTTONS

To store a station in a preset you must first select A, B, or C memory bank by pressing the **PRESET A-B-C** button and tune to the desired AM, FM or SAT* station. Then press the desired station select button for at least 2 seconds. When the preset indicator illuminates, a beep will sound, indicating memorization is complete. To retrieve a previously set station, select the memory bank where the preset was set, then press the corresponding station select button.

* SAT presets are only available on SAT equipped vehicles.



07 | AUTOMATIC CLIMATE CONTROL (if so equipped)

01 AUTO BUTTON

- Press the **AUTO** button **01**. Turn the driver's side temperature control dial **02** to the desired temperature. This will allow the fan speed, air flow distribution and temperature to be automatically maintained.
- Press the **AUTO** button a second time to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from driver's side control.
- When **AUTO** is pressed, **AUTO** will be displayed. When **AUTO** is pressed a second time, **DUAL** will be displayed.

02 DRIVER'S SIDE TEMPERATURE CONTROL DIAL






Turn the driver's temperature control dial left for cold air or right for hot air.

03 PASSENGER'S SIDE TEMPERATURE CONTROL DIAL


Turn the passenger's temperature control dial left for cold air or right for hot air.

04 AIR FLOW MODE CONTROL BUTTON

 
Press **MODE** button repeatedly to scroll through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side, and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.
-  Air flows mainly from the defroster vents.

 
05 FAN SPEED CONTROL DIAL

Turn the fan speed control dial  to the left (slower) or right (faster) to manually control fan speed. Press **AUTO** to automatically control fan speed.

06 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected.
- Turn the driver's side temperature control dial left or right to set the desired temperature.
- To set the defroster on high, turn the fan speed dial all the way to the right.




07 DEFROSTING/DEFOGGING REAR WINDOW AND (if so equipped) OUTSIDE HEATED MIRROR

Push the rear window defroster switch  on. Push the switch again to manually turn the defroster off. This function automatically turns off in approximately 15 minutes.

08 A/C ON/OFF BUTTON

Press the **A/C** button to manually turn the A/C on or off.

09 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle.
- Press the air recirculation button  again to turn air recirculation off.
- The air recirculation mode cannot be selected if the air flow control dial is in the defrost position .

REMOTE KEYLESS ENTRY SYSTEM



LOCK DOORS

Make sure all doors and windows are closed and press the LOCK button to secure the vehicle.



UNLOCK DOORS

Press the UNLOCK button once to unlock the driver's door. Press the UNLOCK button twice within 5 seconds to unlock all doors.



POWER SLIDING DOORS

Press and hold the POWER SLIDING DOOR button (if so equipped) for longer than 0.5 seconds to open or close the power sliding door. The door will reverse direction immediately during power open or power close if the keyfob button is pressed. A chime will sound to indicate the reversal.



POWER BACK DOOR

Press and hold the POWER BACK DOOR button (if so equipped) for longer than 0.5 seconds to open or close the power back door. The hazard lights will flash and a chime will sound to indicate that the power open or power close sequence has started. If you press the button again, the door will reverse direction immediately; a chime will sound to indicate the reversal.



REMOTE OPENING OF FRONT WINDOWS

Press the UNLOCK button longer than 3 seconds to open the windows. (The keyfob is not able to close the windows after opening them.)

REAR SONAR SYSTEM OFF SWITCH (if so equipped)

When backing up, this system will beep to alert you to obstacles within 6 ft. of the rear bumper. The system beeps faster as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 10 inches away from the bumper. Turn the system off by pushing the rear sonar system **OFF** switch. The system will automatically reset the next time the ignition switch is turned on.



CHILD SAFETY DOOR LOCK

Child safety locks help prevent the sliding doors from being opened accidentally, especially when small children are in the vehicle. The child safety lock levers are located on the edge of the sliding doors. When the lever is in the **LOCK** position, the door can be opened only from the outside, with the overhead console switch or the keyfob.



REAR VIEW MONITOR (if so equipped)

When the automatic transmission lever is moved to the R (Reverse) position, the monitor display will automatically change to show the area behind the vehicle.

The colored lines on the display screen indicate approximate distances to objects.



- Red 1.5 feet
- Yellow 3 feet
- Green 7 and 10 feet

POWER SLIDING DOORS AND POWER BACK DOOR (if so equipped)

POWER SLIDING DOORS

The power sliding doors can be activated by the buttons on the keyfob, the overhead console, and the door pillars.

- To open, close or reverse a sliding door, the ignition switch must be off or the automatic transmission selector lever must be in Park.
- To open, close or reverse a sliding door with the keyfob, press and hold the keyfob button for longer than 0.5 seconds.
- To activate a sliding door with the button on the door pillar, the main **ON/OFF** switch must be on, the door must be unlocked, and the child safety door lock must be in the unlock position.
- To activate the power assist feature, manually move a sliding door toward the open or close position using the inside or outside handle. The power assist feature will automatically complete the motion.

POWER BACK DOOR



The power back door can be activated by the buttons on the keyfob, the overhead console, and the rear door pillar.

- To open, close or reverse the back door, the automatic transmission lever must be in Park.
- To open, close or reverse the back door with the keyfob, press and hold the keyfob button for longer than 0.5 seconds.
- To close the back door with the rear door pillar button, the main **ON/OFF** switch must be on.

The power sliding doors and the power back door have an anti-pinch safety feature. Please refer to your Owner's Manual for more information regarding this feature.

ADJUSTABLE ACCELERATOR AND BRAKE PEDALS (if so equipped)

The accelerator and brake pedals can be adjusted for your driving comfort.

- Adjust the pedals when the automatic transmission lever is in Park.
- Push  to move the position of the pedals forward. **01**
- Push  to move the position of the pedals backward. **02**



AUTOMATIC DRIVER POSITIONER (if so equipped)

The automatic driver positioner system has two features:

- Memory storage function
- Entry/exit function



MEMORY STORAGE FUNCTION

Two positions for the driver's seat, accelerator and brake pedals, and outside mirrors can be stored in the automatic driver positioner memory. Follow these procedures to set driver preferences.

SET THE DESIRED POSITIONING

1. Set the automatic transmission lever to the Park position.
2. Turn the ignition on and adjust the driver's seat, accelerator and brake pedals, and outside mirrors to the desired positions.
3. Press the **SET** (memory) button and within 5 seconds press the position button (1 or 2) for at least 1 second until the indicator light illuminates. The position is now stored in memory.

LINK TO KEYFOB

- Within 5 seconds of setting the memory position (indicator light is on and ignition is on), press the **F** button on the remote.
- A keyfob can be linked to each memory button.
- If memory positioning is re-set to a new location, the keyfob automatically re-links.

RECALLING A MEMORY SETTING FROM THE MEMORY PAD

- With the automatic transmission lever in the Park position, press the position button (1 or 2) for at least 1 second.

FROM THE KEYFOB

- If properly linked, operation of the **F** button will automatically return the driver's seat, accelerator and brake pedals, and mirrors to the memorized position.

ENTRY/EXIT FUNCTION

The driver's seat moves to allow the driver to get into and out of the driver's seat more easily. The driver's seat slides backward when:

- The key is removed from the ignition switch.
- The driver's door is opened with the key turned to LOCK.
- The key is turned from ACC to LOCK with the driver's door open and the automatic transmission lever is in the Park position.

The driver's seat returns to the previous position when:

- The key is inserted into the ignition switch.
- The driver's door is closed with the key turned to LOCK.
- The key is turned from ACC to ON while the automatic transmission lever is in the Park position.

DOOR LOCK SWITCH

The door lock switch is located on the driver's door armrest. Push top of switch **01** to lock all the doors. Push bottom of the switch **02** to unlock all the doors.



SUNROOF CONTROLS (if so equipped)

- To tilt the sunroof up, press **UP**. (If the roof is already open, it will close before tilting up.) To tilt the sunroof down, press **DOWN**.
- To open partially, slide the switch toward **OPEN**. (If the roof is tilted up, it will automatically tilt down before opening.) To open fully, slide the switch completely to **OPEN**.
- To close partially, slide the switch toward **CLOSE**. To close fully, slide the switch completely to **CLOSE**.



FUEL FILLER LID RELEASE


To open, press the fuel filler lid release located on the driver's door. To lock, securely close the fuel filler lid. The driver's side power sliding door is disabled when the fuel lid is open. The sliding door can be partially opened manually.



FRONT SEAT ADJUSTMENTS

With manual seats (if so equipped):

- Pull up on the lever under the front of the seat and slide backward or forward; release. **01**
- Lift the lever on the side of the seat to adjust your seatback backward or forward; release when you have found a comfortable angle and the seat belt fits properly. **02**
- Use the dials at the side of the driver's seat to adjust the angle and height of the seat cushion. **03**

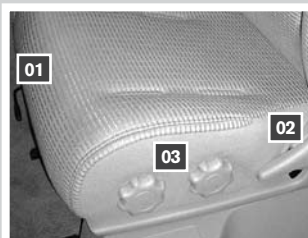

With power seats (if so equipped):

- Move the control forward or backward to adjust the seat cushion forward or backward. **04**
- Pull up to raise the driver's seat cushion; press down to lower the cushion. **04**
- Push the switch forward to move the seatback forward; press it back to move the seatback backward. **05**



Your driver's seat has a lumbar support; adjust it by moving the lever forward or backward. **06**



ADJUSTING AND FOLDING THE 2ND ROW SEAT



To move the 2nd row seats forward or backward:

- Pull the lever up and hold it while you slide the seat forward or backward to the desired position. **01**
- Release the lever to lock the seat in position.

To recline the 2nd row seatbacks:

- Pull the lever up and lean forward or back. **02**

The 2nd row seats can be tipped forward for easy entry or exit from the 3rd row seat:

- To enter the 3rd row seats, lift up on the lever located on the lower base of the seat; this tips the seat forward. **03**
- To exit the 3rd row seats, pull back on the lever on the lower base of the seat and push the seat forward.

To fold the 2nd row seats flat to the floor for maximum cargo hauling:

- Remove the head restraints by lifting up each head restraint. Then, press and hold the release button and place the head restraints in the storage bag.
- Lift up on the recline lever to fold the seatback down on the seat base. **04**
- Press down on the small lever on the back of the seat to release the base of the seat. **05**
- Then fold the entire seat forward into the stowed position on the floor. **06**
- Reverse this process to return the 2nd row seats to a seating position. Make sure to properly install the head restraints and to press the seats down to the floor until they latch into place.

FOLDING THE 3RD ROW SEAT





To fold the 3rd row bench seat flat into the floor for maximum cargo hauling:

- Remove all 3 head restraints. Remove the head restraints by lifting up, then press and hold the release button and continue lifting and place the head restraints in the storage bag.
- Disconnect and secure the center seat belt and tongues into the retractor base. Then, press the button on the seatback while pulling back on the strap to release the back of the seat. **01**
- Rotate the seatback toward the back of the vehicle. **02**
- Pull up on the lever located on the back of the seat base. This will fold the seat base toward the back of the vehicle. **03**
- The entire seat will rotate toward you and stow flat in the floor. **04**
- Reverse this process to return the bench seat to a seating position. Make sure to properly install the head restraints, reattach the center seat belt, press the bench seat down into the floor, and pull back on the seatback until it latches into place.

FRONT-PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag system. Under some conditions, depending on pressure detected on the passenger seat and how the seat belt is used, the front-passenger air bag is designed to automatically turn **OFF**. When the front-passenger air bag is **OFF**, the front-passenger air bag status light will illuminate*. For example:



- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the ^{PASS AIR BAG OFF} or  **will illuminate** to indicate that the front-passenger **air bag is OFF and will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the ^{PASS AIR BAG OFF} or  **will not illuminate** to indicate that the front-passenger **air bag is operational**.

***When the system detects that the front-passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front-passenger air bag is OFF.**

Refer to the Owner's Manual for detailed information regarding the Nissan Advanced Air Bag System.

SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition key is turned to the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for about 6 seconds unless the driver's seat belt is securely fastened.
- The seat belt warning light may also illuminate if the front passenger's seat belt is not fastened when the front passenger's seat is occupied (if so equipped). For 5 seconds after the ignition switch is in the ON position, the system does not activate the warning light for the front passenger.



Refer to the Owner's Manual for detailed information regarding seat belt usage.

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle.



Nissan, the Nissan Brand Symbol, "SHIFT_" tagline, Z and Nissan model names are Nissan trademarks.
©2006 Nissan North America, Inc.