

Panasonic

2.4GHz Digital Cordless Phone

Operating Instructions

Model No. **KX-TG2267B**

KX-TG2267S

Pulse-or-tone dialing capability



KX-TG2267B

2 LINE

Caller ID Compatible

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 15 hours before initial use.

**Panasonic World Wide Web address: <http://www.panasonic.com>
for customers in the USA or Puerto Rico**

Preparation

Basic Operation

Advanced Operation

Useful Information

Thank you for purchasing your new Panasonic cordless telephone.

Please read **IMPORTANT SAFETY INSTRUCTIONS** on page 65 before use. Read and understand all instructions.

Caller ID and Call Waiting Service and Voice Mail Service, where available, are telephone company services. After subscribing to Caller ID, this phone will display a caller's name and phone number. Call Waiting Caller ID, which displays a second caller's name and phone number while the user is on the phone line with the first caller, requires a subscription to both Caller ID with Name and Call Waiting Service. After subscribing to Voice Mail Service, this phone's VM indicator will flash when there are new messages left in the voice mail box at phone company.

Attach your purchase receipt here.

Energy Star:

As an ENERGY STAR® Partner, Panasonic has determined that this product meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR is a U.S. registered mark.



Accessories (included) For extra orders, call 1-800-332-5368.

- AC Adaptor (p. 11)
Order No. KX-TCA1-G
(KX-TCA1)



one

- 4-Wire Telephone Line
Cord with Green Plugs
(p. 12, 13)
Order No. PQJA10088Z



 
one

- 2-Wire Telephone Line
Cord with Transparent
Plugs (p. 13)
Order No. PQJA10075Z



one

- Battery (p. 14, 59)
Order No.
PQPP511SVC
(P-P511)




one

- Handset Cover
(p. 14, 59)
Order No.
PQKK10127Z8
(Black)
PQKK10127Z1
(Silver)



one

 - Wall Mounting
Adaptor (p. 56)
Order No.
PQKL10035Z1
(Black)
PQKL10035Z3
(Silver)



one

- Belt Clip (p. 58)
Order No.
PQKE10341Z3
(Black)
PQKE10341Z1
(Silver)




one

For Best Performance

Battery Charge

A rechargeable Ni-Cd battery powers the handset. Charge the battery for about **15 hours** before initial use (p. 14).

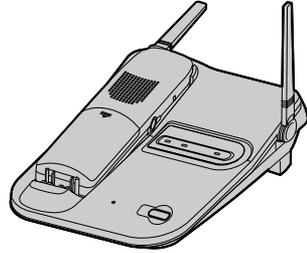


Base Unit Location/Noise

Calls are transmitted between the base unit and the handset using wireless radio waves. **For maximum distance and noise-free operation**, the recommended base unit location is:

Away from electrical appliances such as a TV, personal computer or another cordless phone.

In a HIGH and CENTRAL location with no obstructions such as walls.

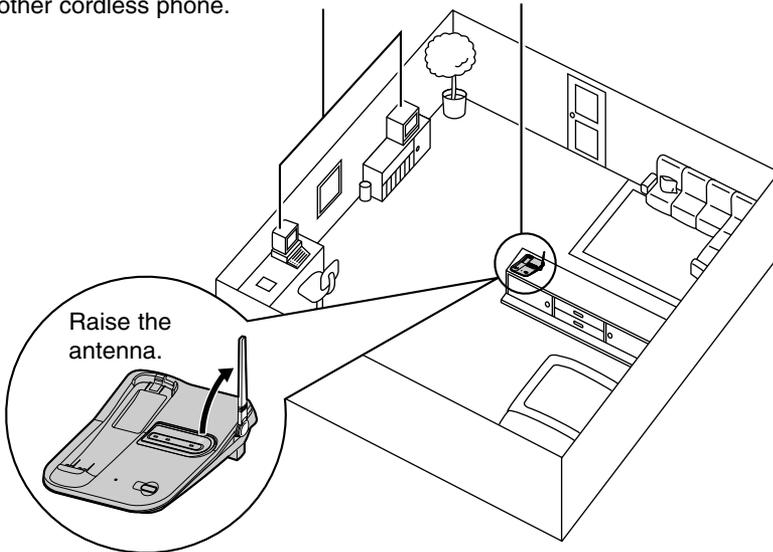

Note:

While using the handset:

- If you are near a microwave oven which is being used, noise may be heard from the receiver or the speaker. Move away from the microwave oven and closer to the base unit.
- If more than one cordless phone is being used and your handset is near another cordless phone's base unit, noise may be heard. Move away from the other cordless phone's base unit and closer to your base unit.

Contents

Preparation

Location of Controls	6
Display	8
Settings	11
Connecting the AC Adaptor	11
Connecting the Telephone Line Cord	12
Installing the Battery in the Handset	14
Battery Charge	14
Dialing Mode	16
Line Mode	17
Programmable Functions	18
Auto Talk Feature	19
Ringer Volume	20
Ringer Tone	21
LCD Contrast	22

Basic Operation

Making Calls	23
Answering Calls	27
Caller ID Service	28
Using the Caller List	29
Viewing the Caller List	29
Calling Back from the Caller List.....	31
Editing the Caller's Phone Number.....	32
The Caller ID Number Auto Edit Feature.....	33
Storing Caller List Information in the Directory	34
Erasing Caller List Information.....	35

Advanced Operation

Directory	36
Storing Names and Numbers.....	36
Entering Names and Symbols	38
Finding Stored Items	40
Dialing	41
Editing	42
Erasing	43
Voice Mail Service	44
Storing a Voice Mail Access Number	44
Setting the Voice Mail (VM) Tone Detection.....	46
Listening to Voice Mail Messages.....	47


Using the Other Line During a Conversation	48
Conference Call	49
Special Features	50
Automatic Security Code Setting	50
Handset Locator	50
Muting Your Conversation	51
Temporary Tone Dialing (For Rotary or Pulse Service Users)	51
How to Use the PAUSE Button (For PBX Line/Long Distance Calls).....	51
For Call Waiting Service Users	52
FLASH Button	52
Line Selection.....	54
Incoming Call Tone	55

Useful Information


Wall Mounting	56
Belt Clip	58
Optional Headset	58
Battery Replacement	59
Adding Another Phone	60
Troubleshooting	61
Important Safety Instructions	65
FCC and Other Information	67
Specifications	70
Index	70

Location of Controls

Base unit

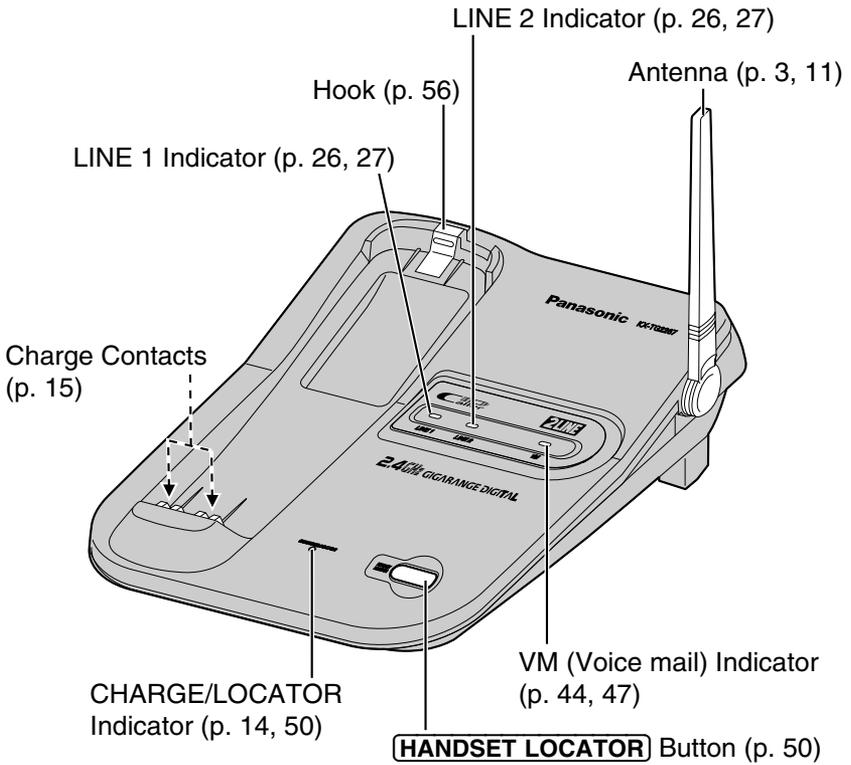


Handset

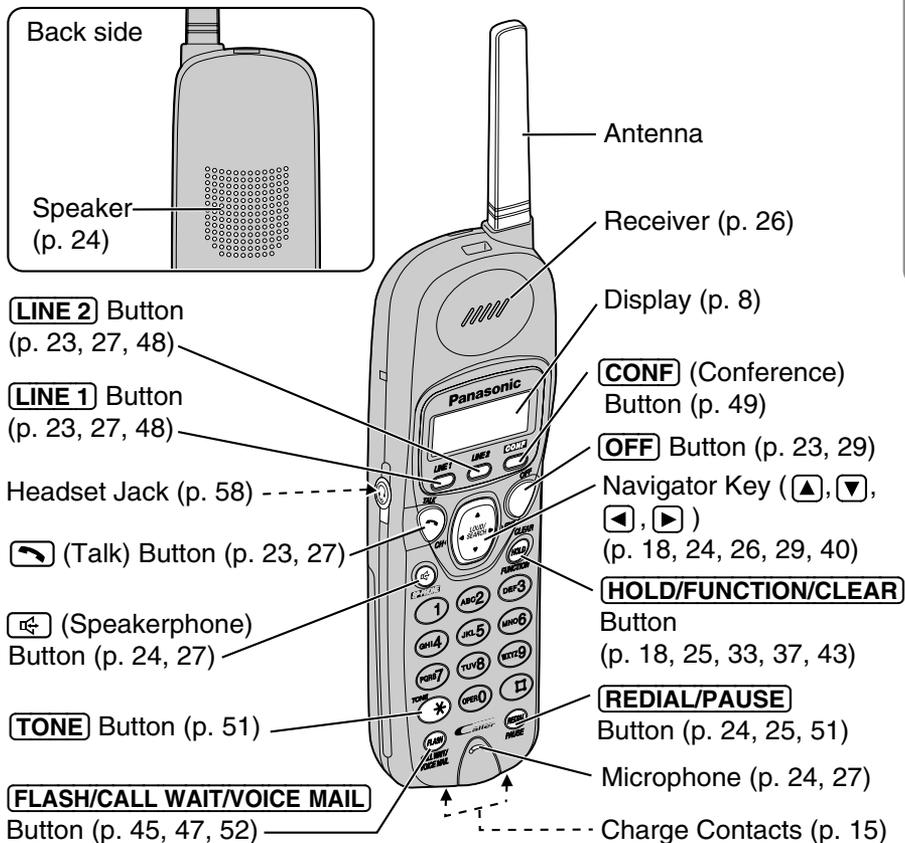

How to use the Navigator key

This key has four active areas that are indicated by arrows.

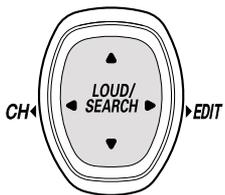

- Pressing the up or down arrow allows you to enter the Caller List and scroll through the function menu, the Caller List and the directory list. It is also used to adjust the handset ringer and receiver/speaker volumes.
- Pressing the right or left arrow allows you to enter the directory list and move the cursor when entering items. The right arrow is used to select or confirm your menu choices and to edit a phone number of the Caller List into one of 3 patterns. The left arrow is used to select a clearer channel.

 
Throughout this Operating Instructions, the navigator key is indicated by the arrows ▼, ▲, ◀ or ▶.

Display

The handset shows you instructions and information on the display. These display prompts are shown below.




The battery needs to be charged. Place the handset on the base unit to charge the battery (p. 15).




(Handset on the base unit)

 The display shows that you have received new calls (p. 29). To check the new calls, lift the handset and press  or .




(Handset off the base unit)

 The display shows that you have received new calls (p. 29). To check the new calls, press  or .




This display shows the number of new calls when  or  is pressed while the handset is off the base unit.

 
To search from the most recent call, press . To search from the oldest call, press  (p. 29). To go to the directory list, press  (Directory key).



 The display shows the voice mail message(s) is/are recorded (ex. Line 1 received message) (p. 44).



 When the handset ringer volume of both lines is set to OFF (p. 20), "Ringer off" will flash for about 45 seconds after completing operations such as talk, viewing the Caller List or programming.



When a call is received, the display shows the caller's name, number and the called line after the first ring.

The called line status indication flashes.



[L1] ▶=Mute
Talk Line1
01-06-35 {■■■■}

During a conversation, the display shows the length of the call (ex. 1 hour, 6 minutes and 35 seconds). The battery strength is also displayed (p. 15).

No link to base
Place on cradle
and try again.

The handset has lost communication with the base unit. Place the handset on the base unit and try again.

SMITH, JACK
1-222-333-4444 [1]
11:20A JAN10 X3

This is a name from the Caller List. The display shows:
— the caller's name,
— the caller's number and the called line,
— the time and date of the last call (ex. Jan. 10, 11:20 AM), and
— the number of times called (ex. 3 times).

Ann
123-456-7890

This is a name from the directory. The stored name and phone number are displayed.

Paging

The base unit is paging the handset (p. 50).

[L1]
Hold {■■■■}

An outside call has been put on hold by the handset user (p. 25). The called line status indication flashes.

To release the hold, press the line button whose status indication is flashing.

BROWN, NANCY
1-555-666-7777 [1]
----Waiting----

A second call is received during a conversation (p. 52).

➡ Display

Please lift up
and try again.

⏴, ⏵, ⏪ or ⏩ was pressed while the handset was on the base unit. Lift the handset and press the button again.

Directory full

When trying to store an item or Caller List information in the directory, the directory memory is full (p. 34, 37).

Save error


While programming procedure, the handset has lost communication with the base unit. Move closer to the base unit and try again.

Not available

The display shows the line that you try to call is busy.



Connecting the AC Adaptor

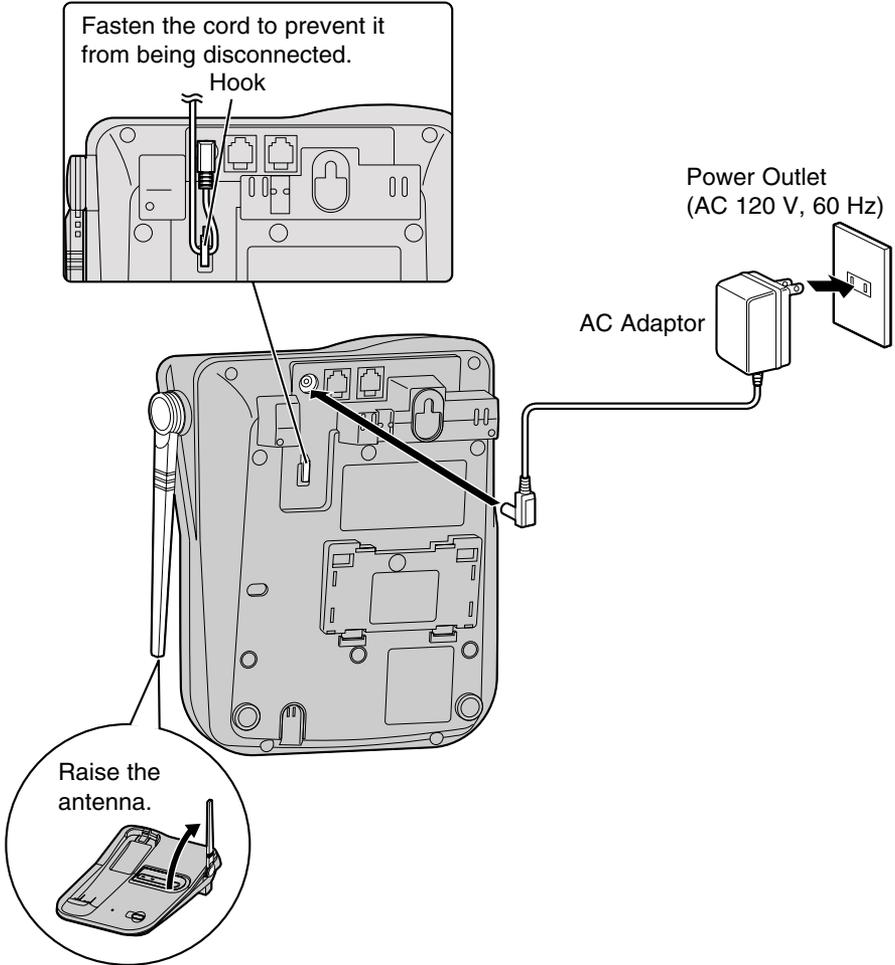


- USE ONLY WITH Panasonic AC ADAPTOR KX-TCA1 (Order No. KX-TCA1-G).
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- To connect a standard telephone on the same line, see page 60.
- If your unit is connected to a PBX which does not support Caller ID services and voice mail services, you cannot access those services.

➔ Settings

Connecting the Telephone Line Cord


Connect the telephone line cord(s) to the unit as follows.

To connect a two-line telephone jack

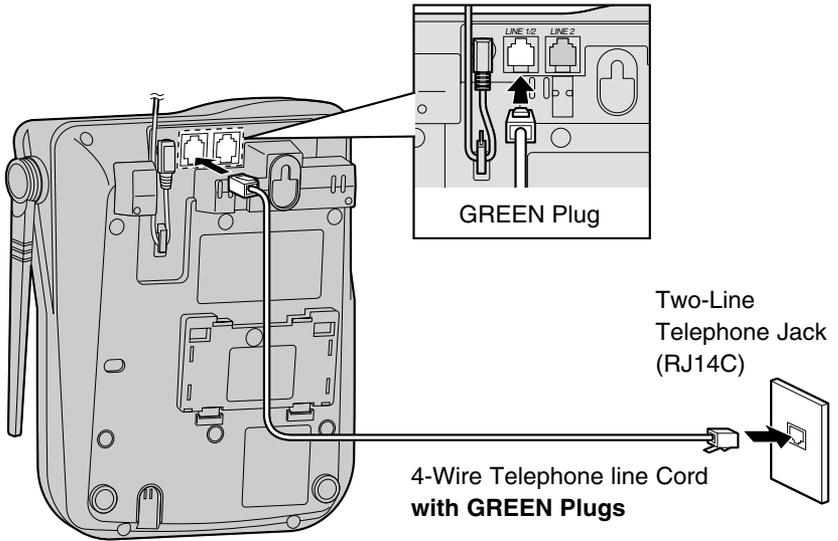




To connect two single-line telephone jacks

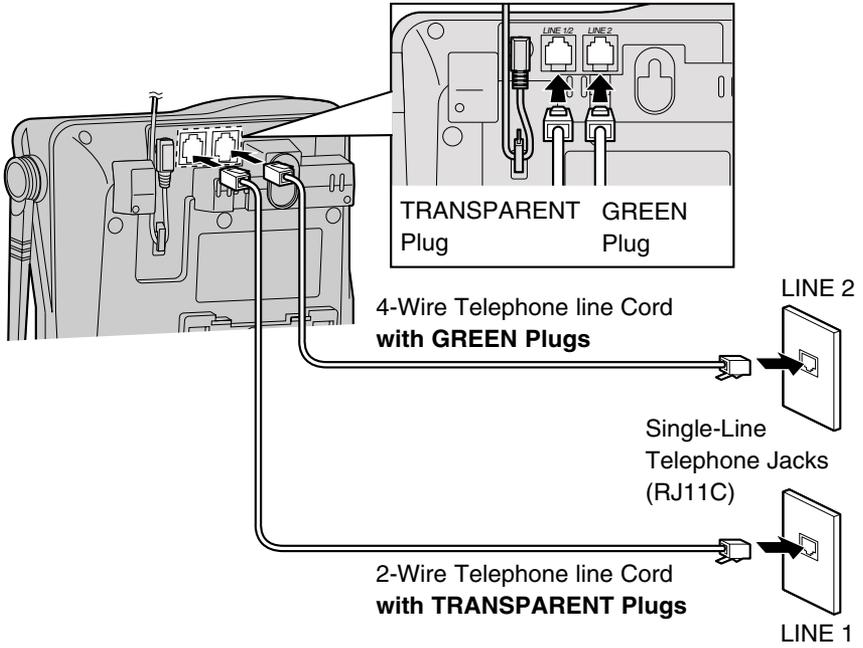


If you use the unit as a single-line telephone only

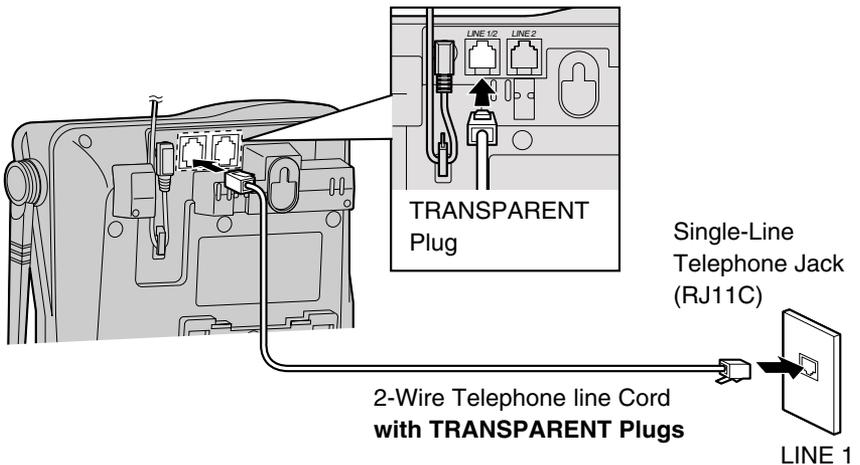

Installing the Battery in the Handset


Insert the battery into the handset as shown, matching the correct polarity (①). Press the battery down until it places into the compartment (②). When finished, close the cover.

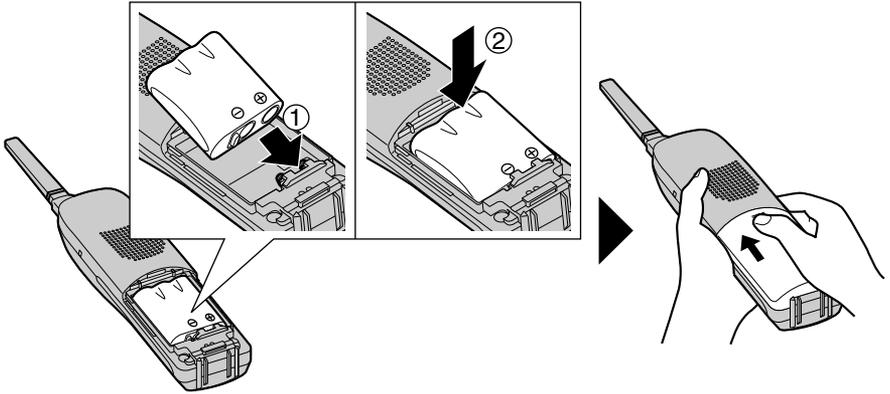

Battery Charge

Place the handset on the base unit and charge for about **15 hours** before initial use.

- The CHARGE/LOCATOR indicator lights and a beep sounds.

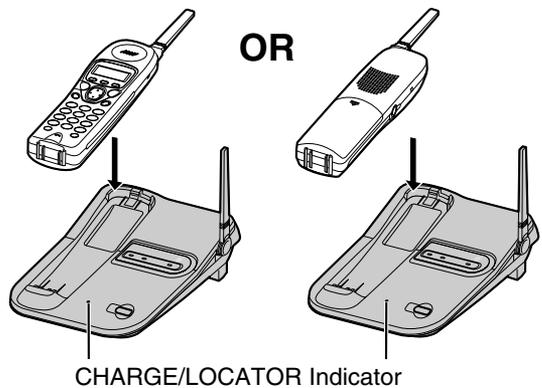



Battery strength


You can check the battery strength on the handset display. The battery strength is as shown in the chart below.

Display prompt	Battery strength
{ ■■■■ }	Fully charged
{ ■■■ }	Medium
{ ■■ }	Low
⚡{ ■■ }⚡ (flashing)	Needs to be recharged.

Recharge

Recharge the battery when:

 - “Recharge” is displayed on the handset,
- “{ ■■ }” flashes on the display, or
- the handset beeps intermittently while it is in use.



- If you DO NOT recharge the handset battery for more than 15 minutes, the display will continually indicate “Recharge” and/or “{ ■■ }” will flash when the handset is lifted off the base unit.

Battery information

After your Panasonic battery is fully charged (p. 14):

Operation	Operating time
While in use (TALK)	Up to 5 hours
While not in use (Standby)	Up to 11 days

- The battery operating time may be shortened depending on usage conditions, such as viewing the Caller ID Caller List or directory list, and ambient temperature.
- Clean the handset and the base unit charge contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until “Recharge” is displayed and/or “{ ■■ }” flashes. This will maximize the battery life.
- The battery cannot be overcharged.

➡ Settings

Dialing Mode

If you have touch tone service, set to “Tone”. If rotary or pulse service is used, set to “Pulse”. Your phone comes from the factory set to “Tone”.

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **HOLD/FUNCTION/CLEAR**.

```
-----
▶Save directory
Ringer volume
```

2 Scroll to “Program” by pressing **▼** or **▲**.

```
Ringer tone
▶Program
-----
```

3 Press **▶**.

```
-----
▶Set flash time
Save VM acces#
```

4 Scroll to “Set dial mode” by pressing **▼** or **▲**.

```
Set line mode
▶Set dial mode
Line selection
```

5 Press **▶**.
•The current setting is displayed.

```
Dial mode
: Tone
▼▲ ▶=Save
```

6 Select “Pulse” or “Tone” by pressing **▼** or **▲**.

```
Dial mode
: Pulse
▼▲ ▶=Save
```

7 Press **▶** (Save key).
•A beep sounds.
•To exit the programming mode, press **OFF**.

```
Dial mode
: Pulse
```

•You can exit the programming mode any time by pressing **OFF**.

Line Mode

If the line is connected to a low voltage system such as a PBX, set to “B”. Your phone comes from the factory set to “A”.

Make sure the unit is not being used and the handset is lifted off the base unit.

- 1 Press **HOLD/FUNCTION/CLEAR**.

 ▶Save directory
 Ringer volume
- 2 Scroll to “Program” by pressing **▼** or **▲**.

Ringer tone
 ▶Program

- 3 Press **▶**.

 ▶Set flash time
 Save VM acces#
- 4 Scroll to “Set line mode” by pressing **▼** or **▲**.

VM tone detect
 ▶Set line mode
 Set dial mode
- 5 Press **▶**.

Line mode
 ▼=Line1 ▲=Line2
- 6 Press **▼** (Line1) or **▲** (Line2) to select the line.
 - The line’s current setting will be displayed.

Line mode
 Line1:A
 ▼▲ ▶=Save
- 7 Select “B” or “A” by pressing **▼** or **▲**.

Line mode
 Line1:B
 ▼▲ ▶=Save
- 8 Press **▶** (Save key).
 - A beep sounds.
 - To program the other line, start again from step 4.
 - To exit the programming mode, press **OFF**.

Line mode
 Line1:B

•You can exit the programming mode any time by pressing **OFF**.

Programmable Functions

You can program the following function items **using the handset near the base unit**. The display shows the programming instructions. See the corresponding pages for function details. **Make sure the unit is not being used and the handset is lifted off the base unit.**

Press **[HOLD/FUNCTION/CLEAR]**.

<Function menu>*

▶ Save directory..... To store an item in the directory (p. 37).
Ringer volume..... To select the ringer volume (p. 20).
Ringer tone..... To select the ringer tone (p. 21).
Program

Press **[▶]**.

<Function menu>*

▶ Set flash time..... To select the flash time (p. 53).
Save VM acces#..... To store a voice mail access number (p. 44).
VM tone detect..... To set the voice mail tone detection(p. 46).
Set line mode..... To select the line mode (p. 17).
Set dial mode..... To select the dialing mode (p. 16).
Line selection..... To change the line selection (p. 54).
Incoming call..... To set the incoming call tone (p. 55).
Auto talk..... To set the Auto Talk feature (p. 19).
CallerID edit..... To set the Caller ID Number Auto Edit feature (p. 33).
LCD contrast..... To select the LCD contrast (p. 22).

During programming:

*To select a desired function item, scroll through the items by pressing **[▼]** or **[▲]**.

Then press **[▶]** to go to the next step.

- “-----” indicates the beginning or end of the function menu.
- You can exit the programming mode any time by pressing **[OFF]**.
- If you do not press any buttons for 60 seconds, the unit will exit the programming mode.
- If the handset has lost communication with the base unit, 3 beeps sound and “No link to base Place on cradle and try again.” is displayed.



Auto Talk Feature

The Auto Talk feature allows you to answer a call by lifting the handset off the base unit without pressing or . If you want to use this feature, turn the feature ON by programming. Your phone comes from the factory set to OFF.

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **HOLD/FUNCTION/CLEAR**.

2 Scroll to “Program” by pressing or .

```
Ringer tone
▶Program
-----
```

3 Press .

4 Scroll to “Auto talk” by pressing or .

```
Incoming call.
▶Auto talk
  CallerID edit
```

5 Press .

- The current setting is displayed.

```
Auto talk
                                     :Off
▼▲                                     ▶=Save
```

6 Select “On” or “Off” by pressing or .

```
Auto talk
                                     :On
▼▲                                     ▶=Save
```

7 Press (Save key).

- A beep sounds.
- To exit the programming mode, press **OFF**.

```
Auto talk
                                     :On
```

- You can exit the programming mode any time by pressing **OFF**.
- In order to view Caller ID information after you lift up the handset to answer a call, leave the Auto Talk feature OFF.

➔ Programmable Functions

Ringer Volume

You can select the handset ringer volume for each line. Set to HIGH, LOW or OFF. If set to OFF, the handset will not ring for the line(s). Your phone comes from the factory set to HIGH.

Make sure the unit is not being used and the handset is lifted off the base unit.

- 1 Press **HOLD/FUNCTION/CLEAR**.
- 2 Scroll to "Ringer volume" by pressing **▼** or **▲**.
- 3 Press **▶**.
- 4 Press **▼** (Line1) or **▲** (Line2) to select the line.
- 5 Select the desired volume by pressing **▼** or **▲**.
 - Each time you press **▼** or **▲**, the volume will change and ring.
 - If you set to OFF, the unit will not ring.
- 6 Press **▶** (Save key).
 - A beep sounds.

```
Save directory
▶Ringer volume
Ringer tone
```

```
Ringer volume
▼=Line1 ▲=Line2
```

```
HIGH Ringer Line1
Low ██████ High
▼▲ ▶=Save
```

```
LOW Ringer Line1
Low ██ High
▼▲ ▶=Save
```

```
OFF Ringer off L1
▼▲ ▶=Save
```

- You can exit the programming mode any time by pressing **OFF**.
- When you replace the battery, the selected ringer volume setting will return to the factory set (HIGH). Reprogram if necessary.



Ringer Tone

You can select the handset ringer tone out of 6 patterns for each line. When a call is being received on the line, the handset rings in the selected tone. LINE 1 is preset to "1". LINE 2 is preset to "2".

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **[HOLD/FUNCTION/CLEAR]**.

2 Scroll to "Ringer tone" by pressing **[▼]** or **[▲]**.

```
Ringer volume
▶Ringer tone
Program
```

3 Press **[▶]**.

```
Ringer tone
▼=Line1 ▲=Line2
```

4 Press **[▼]** (Line1) or **[▲]** (Line2) to select the line.

•The line's current setting will be displayed.

```
Ringer tone
Line1:1
▼▲ ▶=Save
```

5 Select the desired ringer tone by pressing **[▼]** or **[▲]**.

•Each time you press **[▼]** or **[▲]**, the ringer tone will change and ring.

•You can also select the ringer tone by pressing dialing buttons **[1]** to **[6]**.

•If you set the ringer volume to OFF, the handset will not ring (p. 20).

```
Ringer tone
Line1:3
▼▲ ▶=Save
```

6 Press **[▶]** (Save key).

•A beep sounds.

•To program the other line, start again from step 2.

•To exit the programming mode, press **[OFF]**.

```
Ringer tone
Line1:3
```

•You can exit the programming mode any time by pressing **[OFF]**.

➔ Programmable Functions

LCD Contrast

You can program the handset LCD contrast (5 levels). To make the handset display clearer, set to high level. Your phone comes from the factory set to level 3.

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **HOLD/FUNCTION/CLEAR**.

2 Scroll to "Program" by pressing ▼ or ▲.

```
Ringer tone
▶Program
-----
```

3 Press ▶.

4 Scroll to "LCD contrast" by pressing ▼ or ▲.

```
CallerID edit
▶LCD contrast
-----
```

5 Press ▶.

```
LCD contrast
Low ■■■ High
▼▲ ▶=Save
```

6 Select the desired contrast by pressing ▼ or ▲.

- Each time you press ▼ or ▲, the LCD contrast will change.



7 Press ▶ (Save key).

- A beep sounds.
- To exit the programming mode, press **OFF**.

```
LCD contrast
Low ■ High
```

- You can exit the programming mode any time by pressing **OFF**.

Making Calls

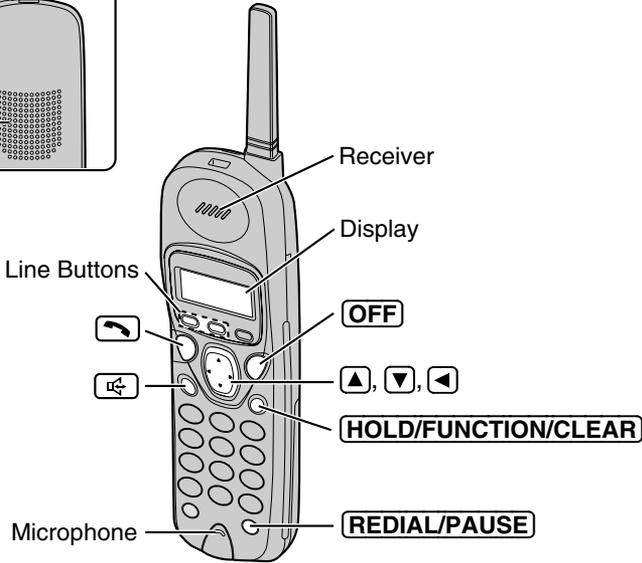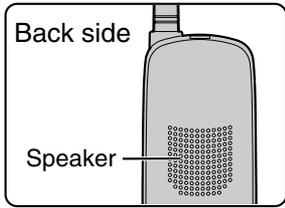

- 1** Press .
- A free line is automatically selected and the line status indication is displayed.
 - To change the line selection, see page 54.

[L1]	▶=Mute
Talk	Line1

- 2** Dial a phone number.
- The dialed number is displayed.
 - After a few seconds, the display will show the length of the call and the battery strength.

[L1]	▶=Mute
1112222	

[L1]	▶=Mute
Talk	Line1
00-00-10	{■■■■}

- 3** To hang up, press **OFF** or place the handset on the base unit.
- The line status indication goes out.

Off	
00-01-18	{■■■■}

- If the handset has lost communication with the base unit, 3 beeps sound and “No link to base Place on cradle and try again.” is displayed.
- In step 1, you may select a line manually by pressing the line button instead of .

➡ Making Calls

To have a hands-free phone conversation (Using Digital Duplex Speakerphone)

- 1 Press .
- A free line is automatically selected and the line status indication is displayed.
 - To change the line selection, see page 54.

[L1]	▶=Mute
SP-phone	Line1

- 2 Dial a phone number.
- The dialed number is displayed.
 - After a few seconds, the display will show the length of the call and the battery strength.

[L1]	▶=Mute
1112222	

- 3 When the other party answers, talk into the microphone.

[L1]	▶=Mute
SP-phone	Line1
00-00-10	{■■■■}

- 4 To hang up, press **OFF** or place the handset on the base unit.
- The line status indication goes out.

Off	
00-01-18	{■■■■}

- If the handset has lost communication with the base unit, 3 beeps sound and “No link to base Place on cradle and try again.” is displayed.

Hands-free Digital Duplex Speakerphone

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If the other party has difficulty hearing you, press  to decrease the speaker volume.
- If the other party's voice from the speaker cuts in/out during a conversation, press  to decrease the speaker volume.
- While talking using , you can switch to the hands-free phone conversation by pressing . To switch back to the receiver, press .

If noise interferes with the conversation

Press  to select a clearer channel in the talk, speakerphone mode, or move closer to the base unit.

To redial the last number dialed

Press  or  and press **REDIAL/PAUSE**.

- You can select a line by pressing the line button instead of .



To dial after confirming the entered number

1 Dial a phone number.

- If you misdial, press **[HOLD/FUNCTION/CLEAR]**. One digit is erased. Dial the correct phone number.

33344444

2 Press .

- You can select a line by pressing the line button instead of .

[L1] ▶=Mute
33344444

OR

To have a hands-free phone conversation, press , and when the other party answers, talk into the microphone.

- After a few seconds, the display will show the length of the call and the battery strength.

[L1] ▶=Mute
Talk Line1
00-00-10 [■■■■]

3 To hang up, press **[OFF]** or place the handset on the base unit.

To redial using the redial list (Memory Redial)

The last 5 phone numbers dialed with the handset are stored in the redial list.

1. Press **[REDIAL/PAUSE]**.

- The last number dialed is displayed.

333-4444

▼▲Redial list

2. Scroll to the desired number by pressing  or .

- You can also scroll through the list by pressing **[REDIAL/PAUSE]**.
- To exit the list, press **[OFF]**.

3. Press  or .

- You can select a line by pressing the line button instead of .

- To erase an item, repeat steps 1 and 2, and press **[HOLD/FUNCTION/CLEAR]**.

- If "No items stored" is displayed, the list is empty.

To put a call on hold

Press **[HOLD/FUNCTION/CLEAR]**.

- The called line status indication on the display and the LINE indicator on the base unit will flash.
- "Hold" is displayed.

[L1]
Hold
[■■■■]

- If you put a call on hold for more than 6 minutes, an alarm tone will sound. The call will be disconnected after a total of 10 minutes.

To release the hold

Press the line button whose status indication is flashing.

- If another phone is connected on the same line (p. 60), you can also release the hold by lifting its handset.

➔ Making Calls

To adjust the receiver volume (HIGH, MEDIUM or LOW) or speaker volume (6 levels) while talking


To increase, press ▲.

To decrease, press ▼.

- The display will return to the length of the call.

While using 📞

- Each time you press ▼ or ▲, the volume level will change among 3 levels (HIGH, MEDIUM or LOW). Your phone comes from the factory set to level MEDIUM.

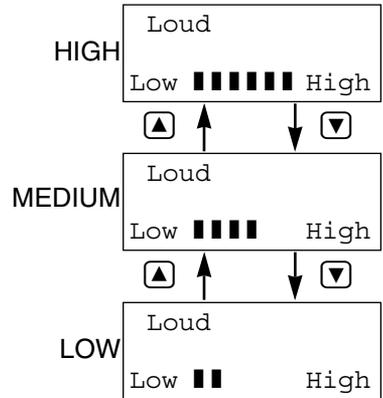

While using 📞

- Each time you press ▼ or ▲, the volume level will change among 6 levels. Your phone comes from the factory set to level 3.

Ex. Speaker volume:
level 6



- When you replace the battery, the selected receiver/speaker volume setting will return to the factory set. Reprogram if necessary.

What the line status indications, “[L1]” and “[L2]”, on the handset display mean

Off	The line is free.
On	You are using the line on the handset or someone else is using the parallel connected telephone.
Flashing	A call is on hold.
Flashing quickly	A call is being received.

What the base unit line indicators mean

Off	The line is free.
On	You are using the line.
Flashing twice every 2 seconds	Someone else is using the parallel connected telephone.
Flashing	A call is on hold.
Flashing quickly	A call is being received.

Answering Calls

When a call is received, the unit rings and “Incoming call” and the called line are displayed. The called line status indication on the display and the LINE indicator on the base unit flashes quickly. The line is automatically selected when you answer the call. (To change the line selection, see page 54.)


If you subscribe to a Caller ID service, the calling party information will be displayed after the first ring (p. 28). In order to view the Caller ID information, please wait until the second ring to answer a call.

Press .

OR

Press , and when the other party answers, talk into the microphone.


- The called line status indication stops flashing.
- You can also answer a call by pressing any dialing button **0** to **9**, ***** or **#** (**Any Key Talk**).
- You may answer a call by pressing the called line button instead of .
- You can select the ringer volume while a call is being received. Press  or  while the handset is just ringing. To set to OFF, press and hold .

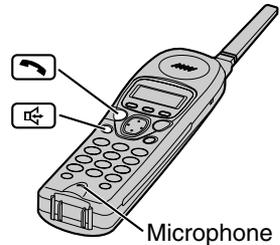

Auto Talk

If you set the Auto Talk feature to ON (p. 19), you can answer a call by lifting the handset off the base unit without pressing

 or .

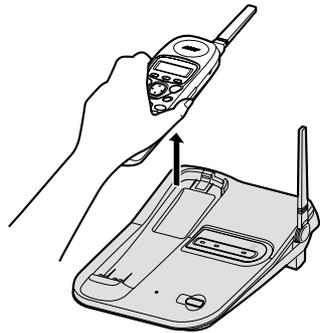

- When the ringer volume is set to OFF, the selected line(s) will not ring (p. 20).

Lighted handset keypad

The handset dialing buttons will light when you press a button or lift the handset off the base unit. They will flash when a call is received. The lights will go out a few seconds after pressing a button, lifting the handset off the base unit, hanging up a call or leaving the programming mode.

Backlit LCD display

The lighted handset display will stay on for a few seconds after pressing a handset button, lifting the handset off the base unit, hanging up a call or leaving the programming mode.

Caller ID Service

This unit is compatible with a Caller ID service offered by your telephone company. After subscribing to a Caller ID service, the calling party's information will be shown on the handset display after the first ring.

The unit can record information of up to 30 different callers for both line combined, including the time and date received, the called line and the number of times called, in the Caller List. The Caller List information is sorted by the most recent to the oldest call. When the 31st call is received, the first call is deleted.



Using the list, you can automatically call back a caller. You can store the callers' names and numbers from the Caller List into the directory.

If you subscribe to both Caller ID and Call Waiting services, when a second call is received while talking, the new caller's name and phone number will be displayed (p. 52).

How caller information is displayed when a call is received

The handset display shows the caller's name, number and the called line after the first ring.

- After you answer the call, the display will show the length of the call.

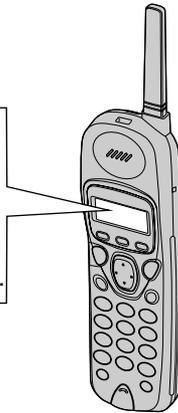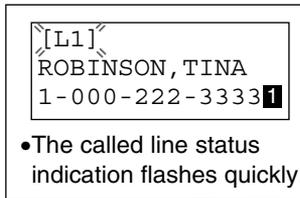


- If both line receive calls at the same time, each caller's information will be displayed alternately.
- Caller information cannot be displayed in the following cases:
 - If the caller dialed from an area which does not provide a Caller ID service, the display will show "Out of area".
 - If the caller has requested not to display his/her information, the display will show "Private caller".
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.
- The name display service may not be available in some areas. For further information, please contact your telephone company.

Using the Caller List




When you receive new calls, "Received calls" will be displayed while the unit is not in use.

 Handset on the base unit



Handset off the base unit

 


Viewing the Caller List

To check who has called, follow the steps below.

Make sure the unit is not being used and the handset is lifted off the base unit.

 
- 1 Press or to enter the Caller List.
 - For example, the display will show the following.



- You can go to the directory list by pressing (p. 40).

- 2 To search from the most recent call, press .
To search from the oldest call, press .
 - To scroll between callers, press or .


- 3 To exit the list, press **OFF**.

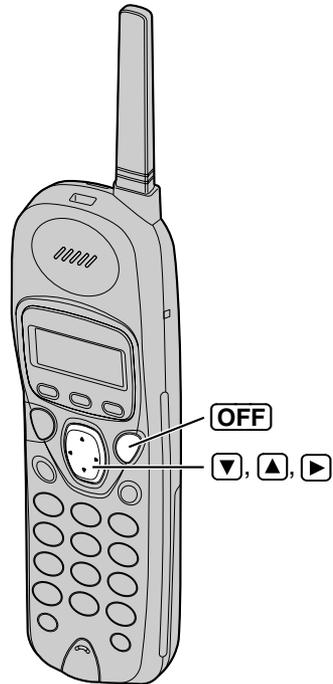

- Once new calls have been checked, "√" will be added.
- If "No items stored" is displayed in step 1, the Caller List is empty.
- If more than one call is received from the same caller, the date and time of the most recent call will be recorded. If the same caller calls again, the call entry with "√" will be deleted.
- If you do not press any buttons for 60 seconds, the unit will exit the Caller List.
- After viewing all of the new call entries, "Received calls" will disappear.

➔ Using the Caller List

Ex. When you search from the most recent call:

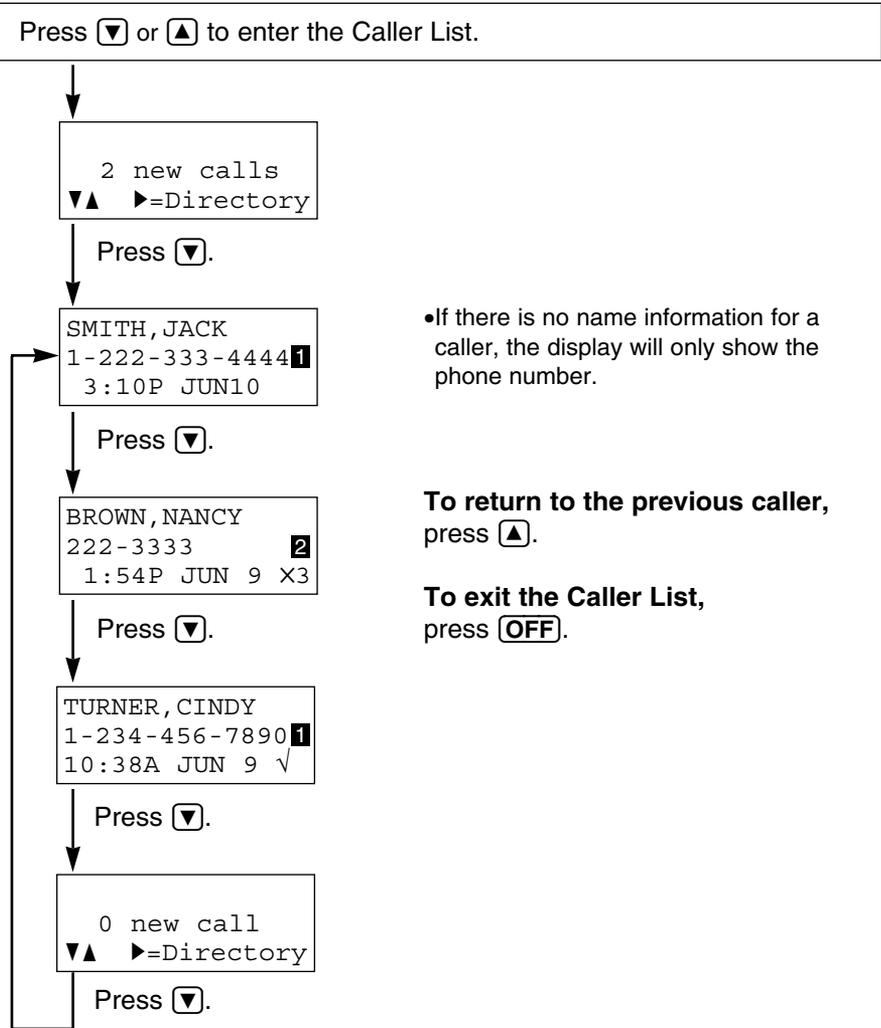


Display meaning:


- ✓ : You have checked this caller information, answered the call or called back the caller.
- X2-X9 : The number of times the same caller called (up to 9). After checking, “X2” – “X9” will be replaced with “✓”.
- 1, 2** : Indication of which line the caller information was received from.




Calling Back from the Caller List

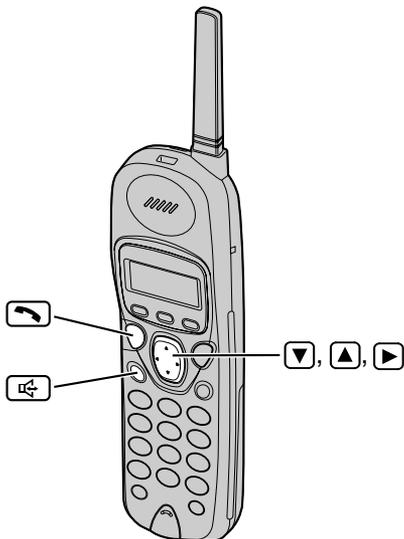


1 Press or to enter the Caller List.

 

 2 Scroll to the desired caller by pressing or .



 3 Press or .
•The displayed phone number is dialed automatically.
•You can also press a line button instead of .



- If the line selection to “Auto” (p. 54), the indicated line will be selected by pressing or on the handset in step 3.
- In some cases, you may have to edit the number before dialing (p. 32). (Ex. You may have to delete “1” and the area code.)
- If a phone number is not displayed in the caller information, you cannot call back that caller.

➔ Using the Caller List

Editing the Caller's Phone Number

You can edit a phone number into one of 3 patterns (see below ①, ②, and ③ on this page) to call back or store it into the directory.

The Caller ID Number Auto Edit Feature (p. 33)

This feature will allow the unit to edit a Caller ID number into one of 3 patterns you desired for you automatically in the Caller List. For detail and activation please see page 33.

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press or to enter the Caller List.

```
5 new calls
▼▲ ▶=Directory
```

2 Scroll to the desired caller by pressing or , and press .

```
PARKER, FRED
1-234-321-5555 1
11:20A JAN12 ✓
```

```
▶Edit
Save directory
▼▲ ▶=Yes
```

3 Press (Yes key) at "Edit".

```
PARKER, FRED
1-234-321-5555 1
▼=Next ▶=Edit
```

4 Press (Edit key) to select a pattern.

•Each time you press , the number is rearranged into one of 3 patterns.

① Phone no. (7 digit pattern)

① 321-5555 1
▼=Next ▶=Edit

② Area code - Phone no. (10 digit pattern)

② 234-321-5555 1
▼=Next ▶=Edit

③ 1- Area code - Phone no. (11 digit pattern)

③ 1-234-321-5555 1
▼=Next ▶=Edit

•The order in which patterns ①-③ are displayed depends on how the telephone number is displayed in step 3.

5 After editing the number, you can continue with calling back or storing procedures.

To call back, press , or a line button (p. 31).

To store the number in the directory, press (Next key). Follow the instructions on the display (p. 34). (If the caller has no name information, see page 34, from step 3.)



The Caller ID Number Auto Edit Feature

There are 3 patterns of phone number (Ⓐ, Ⓑ, and Ⓒ on page 32). This feature allows your phone to automatically edit an in-coming Caller ID number into one pattern you preferred, and display the Caller ID number with that pattern on the handset automatically.

After this feature is activated, Caller ID numbers coming from considered area codes (201, for example), from which the Caller ID numbers have been chosen to follow the desired pattern (7 digit pattern, for example), will be automatically edited from other patterns (11 digit pattern, for example) into the same pattern you have previously selected (which is 7 digit pattern, in the example).

Up to 4 area codes are allowed for this feature for pattern Ⓐ and Ⓑ (p. 32).

To activate this feature, you must 1) set this feature to on, and 2) make an out-going call from Caller List (p. 31) with a number which has one of 3 patterns that you have edited with considered area code, and that you prefer to be followed by future Caller ID numbers, so that in the future all the Caller ID numbers coming from the same area code will be displayed in the same pattern.

The Caller ID number Auto Edit feature is preset to ON at factory.

•If you fail to reach your destination when making the call, the phone number you dialed might have an incorrect pattern, please edit the phone number with another pattern (p. 32).

For example, if you move to another area, you may need to turn this feature to OFF to erase previously edited area codes. Then, if still need, you may activate this feature again.

Make sure the unit is not being used and the handset is lifted off the base unit.

1. Press **[HOLD/FUNCTION/CLEAR]**.
2. Scroll to "Program" by pressing **[▼]** or **[▲]** and press **[▶]**.
3. Scroll to "CallerID edit" by pressing **[▼]** or **[▲]**.
4. Press **[▶]**.
5. Select "On" or "Off" by pressing **[▼]** or **[▲]**.
6. Press **[▶]** (Save key).
 - A beep sounds.
 - To exit the programming mode, press **[OFF]**.

```

Ringer tone
▶Program
-----
  
```

```

Auto talk
▶CallerID edit
LCD contrast
  
```

```

Auto edit
                                     :Off
▼▲                                     ▶=Save
  
```

•When the feature is set to OFF, the unit will still be able to display Caller ID, like regular Caller ID telephone, but the in-coming Caller ID number will not be edited by pattern and by area codes.

➡ Using the Caller List

Storing Caller List Information in the Directory

You can store phone numbers that are in the Caller List into the directory. **Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press  or  to enter the Caller List.

```
10 new calls
▼▲ ▶=Directory
```

2 Scroll to the caller you want to store in the directory by pressing  or , and press .

```
TURNER, CINDY
1-234-456-7890▲
11:20A JAN12 X3
```

•If the number requires editing, see page 32.

```
▶Edit
Save directory
▼▲ ▶=Yes
```

3 Scroll to “Save directory” by pressing  or , and press .

```
Edit
▶Save directory
▼▲ ▶=Yes
```

•A beep sounds.

•To continue storing other items, repeat from step 2.

•To exit the programming mode, press **OFF**.

```
TURNER, CINDY
1-234-456-7890
```

If there is no name information for the caller, “Enter name” will be displayed.

a) If a name is not required, press  (Next key) and press  (Save key).

```
Enter name
█
◀▶ ▼=Next
```

b) If a name is required, enter the name (p. 38). When finished, press  (Next key) and press  (Save key).

```
Enter name
CINDY TURNER
◀▶ ▼=Next
```

•A beep sounds.

•To continue storing other items, repeat from step 2.

•To exit the programming mode, press **OFF**.

```
CINDY TURNER
1-234-456-7890
```

•You can exit the programming mode any time by pressing **OFF**.

•If the display shows “Directory full” in step 3, press **OFF** to exit the list. To erase other stored items from the directory, see page 43.

•You cannot store caller information in the directory if a phone number is not displayed.

•If an alarm tone sounds in step 3, the item cannot be stored in the directory. Place the handset on the base unit and try again from step 1.

Erasing Caller List Information

After checking the Caller List, you can erase some or all of the entries. **Make sure the unit is not being used and the handset is lifted off the base unit.**

To erase a specific caller from the Caller List

- 1 Press or to enter the Caller List.

10 new calls
 =Directory

 - 2 Scroll to the caller you want to erase from the Caller List by pressing or .
- REAGAN, TOM
 1-888-777-6666
 12:20A JAN12
- 3 Press **HOLD/FUNCTION/CLEAR**.
 - A beep sounds and the information is erased.
 - To erase other items, repeat from step 2.
 - To exit the Caller List, press **OFF**.

Clear

To erase all entries in the Caller List

Before erasing all entries, make sure that “0 new call” is displayed.

- 1 Press or to enter the Caller List.

0 new call
 =Directory

- 2 Press **HOLD/FUNCTION/CLEAR**.

Exit
 All clear
 =Yes

- 3 Select “All clear” by pressing or .

Exit
All clear
 =Yes

- 4 Press (Yes key) or **HOLD/FUNCTION/CLEAR**.
 - A beep sounds and all entries are erased.
 - The handset will exit the Caller List.

All clear

Directory

You can store up to 50 names and phone numbers in the directory using the handset. All directory items are sorted by the first word in alphabetical order. Using the directory, you can make a call by selecting a name on the handset display.

Storing Names and Numbers

Make sure the unit is not being used and the handset is lifted off the base unit.





1 Press **HOLD/FUNCTION/CLEAR**.

```
-----
▶Save directory
  Ringer volume
```

2 Press **▶** at "Save directory".
•The display shows the number of stored items in the directory.

```
Directory=
  20 items
```

3 Enter a name, up to 15 characters with the dialing buttons, **◀** or **▶**.
•See the steps for entering names and symbols (p. 38).
•If a name is not required, press **▼** (Next key) and go to step 5.

```
Enter name
█
◀▶          ▼=Next
```

```
Enter name
Tom Jones
◀▶          ▼=Next
```

4 Press **▼** (Next key).

```
Enter phone no.

```

5 Enter a phone number, up to 22 digits.
•Each time you press **HOLD/FUNCTION/CLEAR**, a digit is erased.
To erase all of the digits, press and hold **HOLD/FUNCTION/CLEAR**.

```
0987654321 █
◀▶          ▼=Next
```

6 Press **▼** (Next key).
•If you want to change the storing name or number, press **▲** (Edit key) repeatedly to reach the desired display and change it.

```
Tom Jones
098-765-4321
▲=Edit      ▶=Save
```


7 Press **▶** (Save key).
•A beep sounds.
•To continue storing other items, repeat from step 2.
•To exit the programming mode, press **OFF**.

```
Tom Jones
098-765-4321
```

- If a pause is required for dialing, **REDIAL/PAUSE** can be stored in a phone number counting as one digit (p. 51) in step 5.
- You can exit the programming mode any time by pressing **OFF**.
- If the display shows "Directory full" in step 2, the display will return to step 1, press **OFF** to exit the programming mode. To erase other stored items from the directory, see page 43.
- If an alarm tone sounds in step 7, the item cannot be stored in the directory. Place the handset on the base unit and try again from step 1.

Entering Names and Symbols

The handset dialing buttons (0 to 9), ◀ and ▶ can be used to enter letters and symbols. The letters are printed on the dialing buttons. Pressing each button selects a character as shown below.

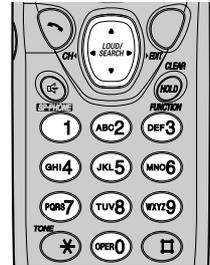

Keys	Number of times key is pressed										
	1	2	3	4	5	6	7	8	9	10	11
1	#	&	'	()	*	,	-	.	/	1
2	a	b	c	A	B	C	2				
3	d	e	f	D	E	F	3				
4	g	h	i	G	H	I	4				
5	j	k	l	J	K	L	5				
6	m	n	o	M	N	O	6				
7	p	q	r	s	P	Q	R	S	7		
8	t	u	v	T	U	V	8				
9	w	x	y	z	W	X	Y	Z	9		
0	0	Blank									
◀	To move the cursor to the left										
▶	To move the cursor to the right										

•To enter another character using the same dialing button, press ▶ to move the cursor to the next space.

If you make a mistake while entering a name

Use ◀ or ▶ to move the cursor to the incorrect character, press **(HOLD/FUNCTION/CLEAR)** to delete and enter the correct character. Each time you press **(HOLD/FUNCTION/CLEAR)**, a character is erased. To erase all characters, press and hold **(HOLD/FUNCTION/CLEAR)**.



For example, to enter “Tom Jones”:

- | | | |
|----|---|--|
| 1 | Press [HOLD/FUNCTION/CLEAR] . | -----
▶Save directory
Ringer volume |
| 2 | Press [▶] at “Save directory”. | Directory=
20 items |
| 3 | Press [8] four times. | Enter name
█
◀▶ ▼=Next |
| 4 | Press [6] three times, then press [▶] to move the cursor to the right. | T █ |
| 5 | Press [6] . | To █ |
| 6 | Press [▶] twice to enter a blank. | Tom █ |
| 7 | Press [5] four times. | Tom J █ |
| 8 | Press [6] three times, then press [▶] to move the cursor to the right. | Tom Jo █ |
| 9 | Press [6] twice. | Tom Jon █ |
| 10 | Press [3] twice. | Tom Jones █ |
| 11 | Press [7] four times. | Enter name
Tom Jones
█
◀▶ ▼=Next |
| 12 | When finished, press [▼] (Next key).
•Follow steps 5 to 7 on page 37 to complete the operation. | Enter phone no.

█ |

•While entering names, the cursor will flash on the display.


Finding Stored Items

You can search the directory using the handset.

Make sure the unit is not being used and the handset is lifted off the base unit.

- 1 Press or to enter the directory list.

Directory list
▼▲
▶=Caller's list

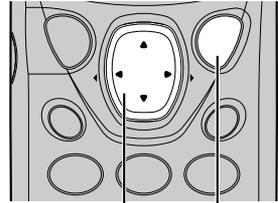

- You can go to the Caller List by pressing (p. 29).

- 2 Press or .

- The first item is displayed.

Ann
123-456-7890

- 3 Scroll to the desired caller by pressing or .


- All directory items are stored in the order shown on the right.

To search for a name by initial

- ① Press the dialing button for the first letter of the desired name until any name with the same initial is displayed (See the Index table on page 41).

Ex. To find "Frank", press repeatedly until the first item under "F" is displayed.

- ② Press repeatedly until the name is displayed.

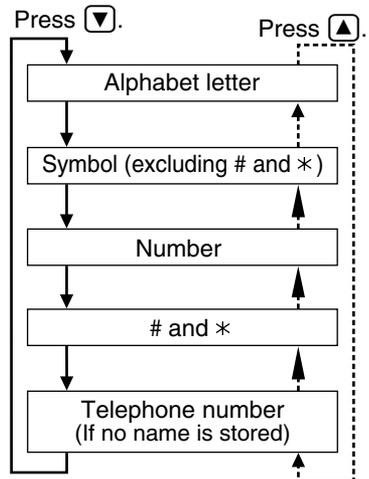

- You can exit the directory list any time by pressing .
- If "No items stored" is displayed in step 2, the directory list is empty.



Index table

Keys	Index	Keys	Index
①	Other symbols, 1	⑥	M, N, O, 6
②	A, B, C, 2	⑦	P, Q, R, S, 7
③	D, E, F, 3	⑧	T, U, V, 8
④	G, H, I, 4	⑨	W, X, Y, Z, 9
⑤	J, K, L, 5	⑩	0

Dialing

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press ◀ or ▶ to enter the directory list.

Directory list
 ▼▲
 ▶=Caller's list

2 Press ▼ or ▲.
•The first item is displayed.

3 Scroll to the desired item that you want to dial by pressing ▼ or ▲.
•To search for the item by initial, see page 40.

Frank
 456-7890

4 Press ⏪ or ⏩.
•The number is dialed automatically.
•You can also press a line button instead of ⏪.

[L1] ▶=Mute
 4567890

5 To hang up, press **OFF** or place the handset on the base unit.

•You can exit the directory list any time by pressing **OFF**.

➡ Directory

Editing

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press ◀ or ▶ to enter the directory list.

2 Press ▼ or ▲.
•The first item is displayed.

3 Scroll to the directory item you want to change by pressing ▼ or ▲, and press ▶.
•To search for the item by initial, see page 40.
•If you do not need to change the name, go to step 5.

```
Jane
456-7890
```

```
Enter name
Jane
◀▶          ▼=Next
```

4 Edit the name using the dialing buttons, ◀ or ▶ (p. 38), up to 15 characters.

```
Enter name
Jane Walker
◀▶          ▼=Next
```

5 Press ▼ (Next key).

```
4567890
◀▶          ▼=Next
```

6 Add a number to the current number.
•If you do not need to change the number, press ▼ (Next key) and go to step 8.
•Each time you press **HOLD/FUNCTION/CLEAR**, a digit is erased.
To erase all digits, press and hold **HOLD/FUNCTION/CLEAR**.

```
12344567890
◀▶          ▼=Next
```

7 Press ▼ (Next key).
•If you want to change the storing name or number, press ▲ (Edit key) repeatedly to reach the desired item and change it.

```
Jane Walker
1-234-456-7890
▲=Edit    ▶=Save
```

8 When finished, press ▶ (Save key).
•A beep sounds.
•To continue editing other items, repeat from step 3.
•To exit the directory list, press **OFF**.

```
Jane Walker
1-234-456-7890
```

•You can exit the directory list any time by pressing **OFF**.

Erasing

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **◀** or **▶** to enter the directory list.

2 Press **▼** or **▲**.
•The first item is displayed.

3 Scroll to the directory item that you want to erase by pressing **▼** or **▲**.
•To search for the item by initial, see page 40.

Helen 1-234-567-8901

4 Press **HOLD/FUNCTION/CLEAR**.
•To stop erasing, press **◀** (No key).

Clear?
◀=No ▶=Yes

5 Press **▶** (Yes key) or **HOLD/FUNCTION/CLEAR**.
•A beep sounds and the item is erased.
•To erase other items, repeat from step 3.
•To exit the directory list, press **OFF**.

Clear


•You can exit the directory list any time by pressing **OFF**.

Voice Mail Service

Voice mail service is an electronic on-line answering system offered by your telephone company. After subscribing, the voice mail system can answer calls automatically for you when your line is busy or if calls are not answered, and caller can leave their messages at the voice mail box virtually located at the telephone company. After the voice mail box having received messages, the unit will indicate it in two ways: (a) "Voice mail" with the line(s) which received message(s) displayed on the handset, and (b) the VM indicator on the base unit will flash. To use this feature, you must first store your access number.

Storing a Voice Mail Access Number

Make sure the unit is not being used and the handset is lifted off the base unit.

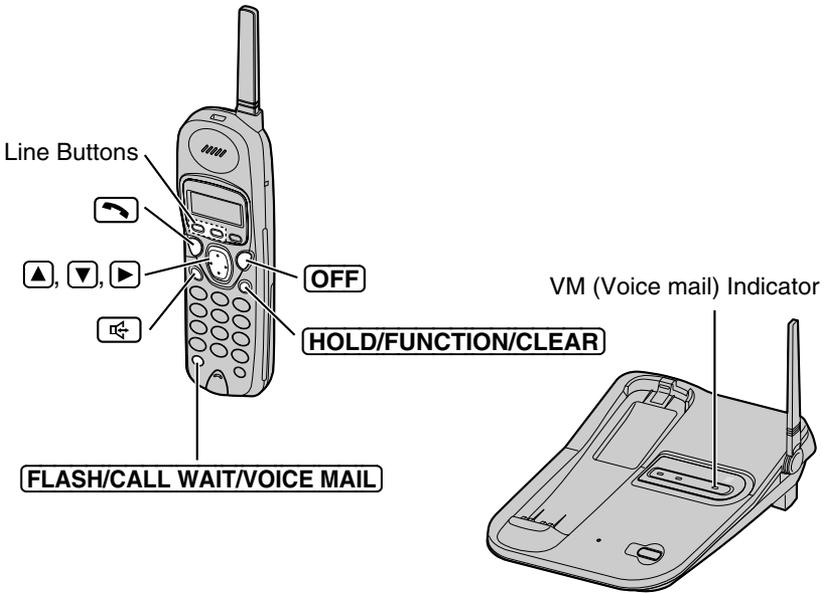

- 1 Press **HOLD/FUNCTION/CLEAR**.
- 2 Scroll to "Program" by pressing **▼** or **▲**.
- 3 Press **▶**.

Ringer tone
▶ Program



4 Scroll to "Save VM acces#" by pressing **▼** or **▲**.

Set flash time
▶ Save VM acces#
VM tone detect

5 Press **▶**.

6 Press **▼** (Line 1) or **▲** (Line 2) to select the line.

Save VM access#
▼=Line1 ▲=Line2

7 Enter your access number, up to 32 digits.

- You may enter pauses*.
- Each time you press **HOLD/FUNCTION/CLEAR**, a digit is erased. To erase all digits, press and hold **HOLD/FUNCTION/CLEAR**.

1234567PPP890 █
◀▶ ▼=Next

8 Press **▼** (Next key).

- If you want to edit the entered number, press **▲** (Edit key) and return to step 7.

1234567PPP890
▲=Edit ▶=Save

9 Press **▶** (Save key).

- A beep sounds.
- To program the other line, start again from step 4.
- To exit the programming mode, press **OFF**.

1234567PPP890
Save VM access#

• You can exit the programming mode any time by pressing **OFF**.

*For quick access to your voice mail box by using **FLASH/CALL WAIT/VOICE MAIL**, you may add pauses between your voice mail box access number and your mail box password in step 7.

EX. 1-222-333-4444 PPPP 8888

Your voice mail box access number | Pauses | Your mail box password

Pressing **REDIAL/PAUSE** once creates a 3.5 seconds delay and counts as one digit. The delay time depends on a telephone company.

To erase a stored number

Repeat steps 1 through 6 → Press and hold **HOLD/FUNCTION/CLEAR** until all of the digits are erased → **▼** (Next key) → **▶** (Save key).

- A beep sounds.

➡ Voice Mail Service

Setting the Voice Mail (VM) Tone Detection

Your telephone company sends special signals (Voice mail tones) to activate the VM indicator. Press  or  to listen to the dial tone. If you hear a series of dial tones followed by a continuous dial tone, this is indication that a new message was recorded. Your phone comes set to detect these tones (set to "On"). Minutes after you hang up or after the phone stops ringing, your unit will seize the phone line and check if a message has been recorded. If a new message was recorded at your telephone company, "Voice mail" will be displayed on the handset and the base unit VM indicator will flash.

Set this programming to "Off" when:

- you do not subscribe to a voice mail service,
- your telephone company does not send a series of tones, followed by a continuous tone, or
- your phone is connected to a business or office telephone system (PBX).

Please refer to below to set this programming to OFF.

If you are not sure which setting is required, consult your local telephone company or contact Panasonic Customer Call Center.

Make sure the unit is not being used and the handset is lifted off the base unit.

- 1 Press **HOLD/FUNCTION/CLEAR**.
 - 2 Scroll to "Program" by pressing  or , and press .
 - 3 Scroll to "VM tone detect" by pressing  or .
 - 4 Press .
 - 5 Press  (Line 1) or  (Line 2) to select the line.
 - The line's current setting will be displayed.
 - 6 Select "Off" or "On" by pressing  or .
 - 7 Press  (Save key).
 - A beep sounds.
 - To program the other line, start again from step 3.
 - To exit the programming mode, press **OFF**.
- You can exit the programming mode any time by pressing **OFF**.

```
Save VM acces#
▶VM tone detect
Set line mode
```

```
VM tone detect
▼=Line1 ▲=Line2
```

 
```
VM tone detect
Line1:On
▼▲ ▶=Save
```

```
VM tone detect
Line1:Off
```

Listening to Voice Mail Messages


After the voice mail box having received messages, the unit will indicate it in two ways:
(a) "Voice mail" with the line(s) which received message(s) displayed on the handset, and
(b) the VM indicator on the base unit will flash.

Ex. Line 1 received message(s).



To listen to your voice mail message(s), follow the steps below.

 - 1 Press **FLASH/CALL WAIT/VOICE MAIL**.
 - The line(s) which received message(s) will flash.



- 2 Press the line button which received messages.
 - The unit is connected to the telephone line and dials the access number (p. 44).



- 3 Follow the pre-recorded instructions.

- 4 When finished, press **OFF**.

- If "Voice mail" still remains on the display or the VM indicator still flashes even if you have listened to your voice mail message(s), press **HOLD/FUNCTION/CLEAR**, and press and hold **HOLD/FUNCTION/CLEAR** until the unit beeps. "Voice mail" will disappear and the VM indicator will turn off.
- If your voice mail service uses a voice mail tone and the recorded message is over 3 minutes long, "Voice mail" may not be displayed and the VM indicator may not flash.
- If your voice mail service uses a voice mail tone, the tone will be heard from any parallel connected phone. If you use another phone to retrieve messages, you have to dial your access number manually.

Using the Other Line During a Conversation

During a conversation, if **two tones** sound and the other line status indication on the display flashes quickly, an incoming call is being received on that line. You can answer the second call while holding the first call. You can also make a call without terminating the first call. If you subscribe to a Caller ID service, the second caller's information will be displayed when a call is being received on the other line (p. 28).

You may delete the **two tones** (incoming call tone) by programming. See page 55.

EX: If you are using LINE 1 To make a second call

 
1 Press **HOLD/FUNCTION/CLEAR** to put the first call (LINE 1) on hold.

- The LINE 1 status indication flashes.



2 Press the other line button (LINE 2) and dial a phone number.

- The LINE 2 status indication is displayed.



3 To return to the first call (LINE 1), press the line button for the first call (LINE 1).

 
- The second call is terminated.



To answer a second call


1 Press **HOLD/FUNCTION/CLEAR** to put the first call (LINE 1) on hold.

- The LINE 1 status indication flashes and the unit rings.
- The LINE 2 status indication flashes quickly.



2 Press the other line button (LINE 2) to answer a second call.

 - The LINE 1 status indication is flashes and the LINE 2 status indication is displayed.



3 To return to the first call (LINE 1), press the line button for the first call (LINE 1).

- The second call is terminated.



- To hold the second call in step 3, press **HOLD/FUNCTION/CLEAR** before pressing the line button for the first call.

Conference Call

While having a conversation on one line, you can make or answer a second call on the other line and then combine the calls to make a conference call.

EX: If you are using LINE 1

To make a second call

1 Press **HOLD/FUNCTION/CLEAR** to put the first call (LINE 1) on hold.

- The LINE 1 status indication flashes.

```
[L1]
Hold
{■■■■}
```

2 Press the other line button (LINE 2) and dial a phone number.

- The LINE 2 status indication is displayed.

```
[L1] [L2] ▶=Mute
2345678
```

3 When the other party answers, press **CONF** to make a conference call.

- Both line status indications are displayed.

```
[L1] [L2] ▶=Mute
Conference
00-00-00 {■■■■}
```

To answer a second call

1 Press **HOLD/FUNCTION/CLEAR** to put the first call (LINE 1) on hold.

- The LINE 1 status indication flashes and the unit rings.
- The LINE 2 status indication flashes quickly.

```
[L1] [L2]
ROBINSON, TINA
1-000-222-3333
```

2 Press the other line button (LINE 2) to answer a second call.

- The LINE 1 status indication is flashes and the LINE 2 status indication is displayed.

```
[L1] [L2] ▶=Mute
Talk Line2
00-00-00 {■■■■}
```

3 When the second call is connected, press **CONF** to make a conference call.


- Both line status indications are displayed.

```
[L1] [L2] ▶=Mute
Conference
00-00-00 {■■■■}
```

During a conference call:

- To hang up both lines, press **OFF**.
- To hang up only one line, press the line button for the party with which you want to continue talking.
- To put both lines on hold, press **HOLD/FUNCTION/CLEAR**. To talk with only one caller, press the corresponding line button. (The other caller is put on hold.) To resume both lines, press **CONF**.

Special Features

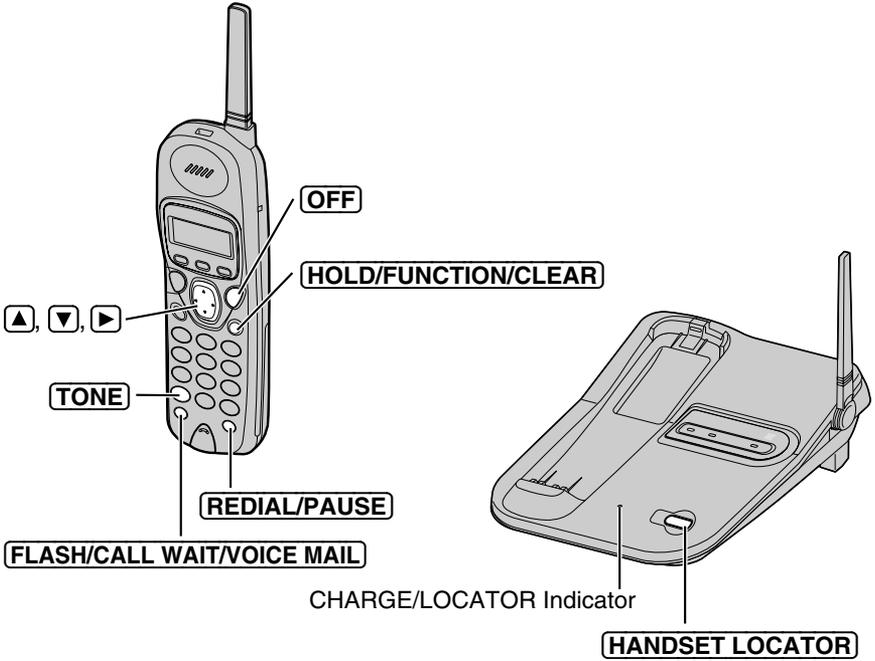

Automatic Security Code Setting

Each time you place the handset on the base unit, the unit automatically selects one of more than a million security codes. These codes help prevent the unauthorized use of your telephone line by another cordless telephone user.

Handset Locator

You can locate the handset or page the handset user with beep tones from the base unit.

- 1 Press **HANDSET LOCATOR**.
 - The **CHARGE/LOCATOR** indicator flashes. The handset beeps for 1 minute and "Paging" is displayed.
- 2 To stop paging, press **HANDSET LOCATOR** again or press **OFF** on the handset.



Muting Your Conversation

Press  while talking.

- The indication of mute flashes.
- The other party cannot hear your voice but you can hear theirs.
- To release the mute**, press  again.
- When you switch between the receiver and speaker, the mute will be released.



Temporary Tone Dialing (For Rotary or Pulse Service Users)

Press **[TONE]** before entering access numbers which require tone dialing.

- The dialing mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the mode will return to pulse.

How to Use the PAUSE Button (For PBX Line/Long Distance Calls)

We recommend you press **[REDIAL/PAUSE]** if a pause is required for dialing with a PBX or to make a long distance call.

Ex. Line access number **[9]** (PBX)

[9] → **[REDIAL/PAUSE]** →

- Pressing **[REDIAL/PAUSE]** once creates a 3.5 second pause. This prevents misdialing when you redial or dial a stored number.
- Pressing **[REDIAL/PAUSE]** more than once increases the length of the pause between numbers.

➡ Special Features

For Call Waiting Service Users

Press **FLASH/CALL WAIT/VOICE MAIL** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **FLASH/CALL WAIT/VOICE MAIL** again.
- The call waiting service cannot be used when:
 - the first call on the same line is placed on hold,
 - a parallel connected telephone is in use, or
 - you are having a conference call on both lines (p. 49).
- If this function does not operate properly, consult your telephone company for details.

Call Waiting Caller ID Feature

Call Waiting Caller ID Feature allows your handset to display the second caller's information. After you hear a call-waiting tone while talking, the handset will display the caller's name with the phone number, the called line and "----Waiting----".

BROWN, NANCY 1-555-666-7777 1 ----Waiting----
--

- Please contact your telephone company for details and availability in your area.

FLASH Button

Pressing **FLASH/CALL WAIT/VOICE MAIL** allows you to use special features of your host PBX such as transferring an extension call or accessing special telephone services (optional) such as call waiting.

- Pressing **FLASH/CALL WAIT/VOICE MAIL** releases following operations:
 - temporary tone dialing, or
 - muting your conversation.



Selecting the flash time

The flash time depends on your telephone exchange or host PBX. You can select the following flash times: “700, 600, 400, 300, 250, 110, 100 or 90 ms (milliseconds)”. Your phone comes from the factory set to “700 ms”.

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **HOLD/FUNCTION/CLEAR**.

2 Scroll to “Program” by pressing **▼** or **▲**.

```
Ringer tone
▶Program
-----
```

3 Press **▶**.

```
-----
▶Set flash time
Save VM acces#
```

4 Press **▶** at “Set flash time”.

```
Flash time
▼=Line1 ▲=Line2
```

5 Press **▼** (Line1) or **▲** (Line2) to select the line.

- The line’s current setting will be displayed.

6 Select the desired time by pressing **▼** or **▲**.

```
Flash time
Line1:700ms
▼▲ ▶=Save
```

7 Press **▶** (Save key) .

- A beep sounds.
- To program the other line, start again from step 3.
- To exit the programming mode, press **OFF**.

```
Flash time
Line1:110ms
```

•You can exit the programming mode any time by pressing **OFF**.

•If the unit is connected via a PBX, PBX functions (transferring a call etc.) might not work correctly. Consult your PBX supplier for the correct setting.

➡ Special Features

Line Selection

The unit will automatically select a free line which is not being used by a parallel connected telephone when you make a call by pressing  or . The unit will also select the in-coming called line when you answer the in-coming call. You can change the line selection.

There are three options as following:

Line 1: Line 1 will be selected.

Line 2: Line 2 will be selected.

Auto : A free line will be selected when making a call. Line 1 has priority. But when you call back using Caller ID information (p. 31), the line that is indicated has priority. When a call is being received, the called line is selected when you press  or  to answer the in-coming call. Your phone comes from the factory set to “Auto”.

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **HOLD/FUNCTION/CLEAR**.

2 Scroll to “Program” by pressing  or .

```
Ringer tone
▶Program
-----
```

3 Press .

4 Scroll to “Line selection” by pressing  or .

```
Set dial mode
▶Line selection
Incoming call.
```

5 Press .
•The current setting is displayed.

```
Line selection
:Auto
▼▲ ▶=Save
```

6 Select the desired line selection, “Line1”, “Line2” or “Auto”, by pressing  or .

```
Line selection
:Line2
▼▲ ▶=Save
```

7 Press  (Save key).
•A beep sounds.
•To exit the programming mode, press **OFF**.

```
Line selection
:Line2
```

- You can exit the programming mode any time by pressing **OFF**.
- Any line can be selected manually by pressing the line button although the line is selected in step 6.

Incoming Call Tone

While one line is being used, you can be informed if another call arrives on the other line by two tones. This incoming call tone can be set/deleted by programming.

On: The incoming call tone will be heard for as long as the other line rings.

2: The incoming call tone will only be heard 2 times.

Off: The incoming call tone will not be heard.

Your phone comes from the factory set to "2".

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press **HOLD/FUNCTION/CLEAR**.

2 Scroll to "Program" by pressing **▼** or **▲**.

```
Ringer tone
▶Program
-----
```

3 Press **▶**.

4 Scroll to "Incoming call." by pressing **▼** or **▲**.

```
Line selection
▶Incoming call.
Auto talk
```

5 Press **▶**.
•The current setting is displayed.

```
Incoming call
tone:2
▼▲ ▶=Save
```

6 Select the desired line selection, "On", "Off" or "2", by pressing **▼** or **▲**.

```
Incoming call
tone:On
▼▲ ▶=Save
```

7 Press **▶** (Save key).
•A beep sounds.
•To exit the programming mode, press **OFF**.


```
Incoming call
tone:On
```

•You can exit the programming mode any time by pressing **OFF**.


Wall Mounting

This unit can be mounted on a wall phone plate.


- 1 Push the hook and turn it around.
Turn the hook until a click is heard.

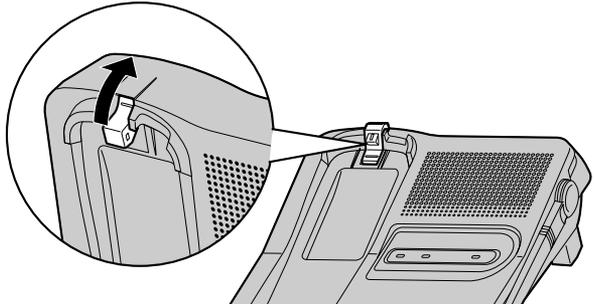

- 2 Connect the AC adaptor.

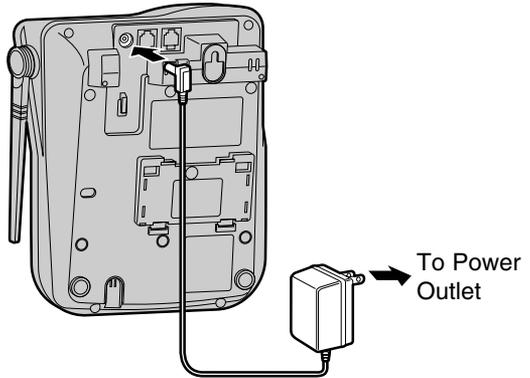


- 3 Tuck the telephone line cord inside the wall mounting adaptor, then push it in the direction of the arrow.
 - The word "UP" should face upward.

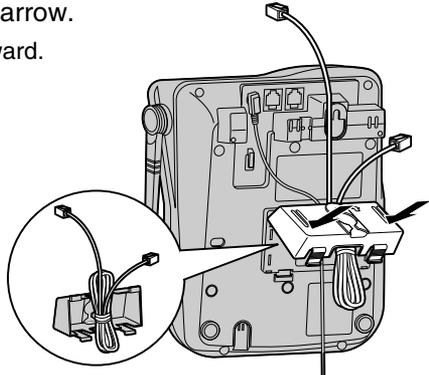


4 Connect the telephone line cord.
Mount the unit, then slide down.

- Raise the antenna.
- Fasten the telephone line cord to prevent it from being disconnected.

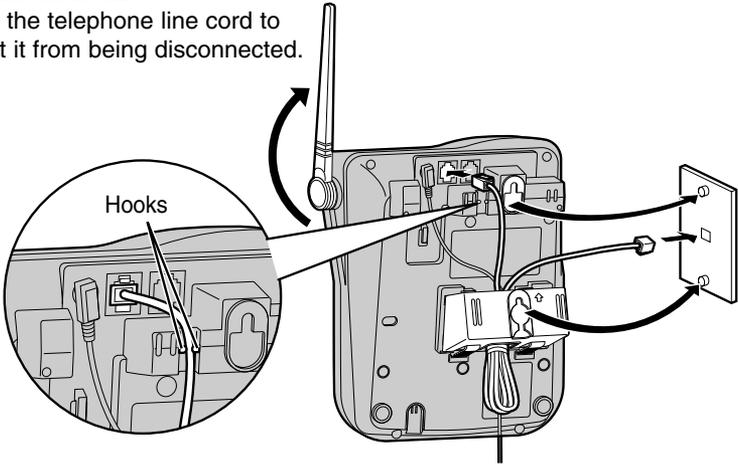

5 **To charge the handset battery:**
Fix the charge contacts (1) and insert the hook to the handset hole (2).


- The CHARGE/LOCATOR indicator lights.

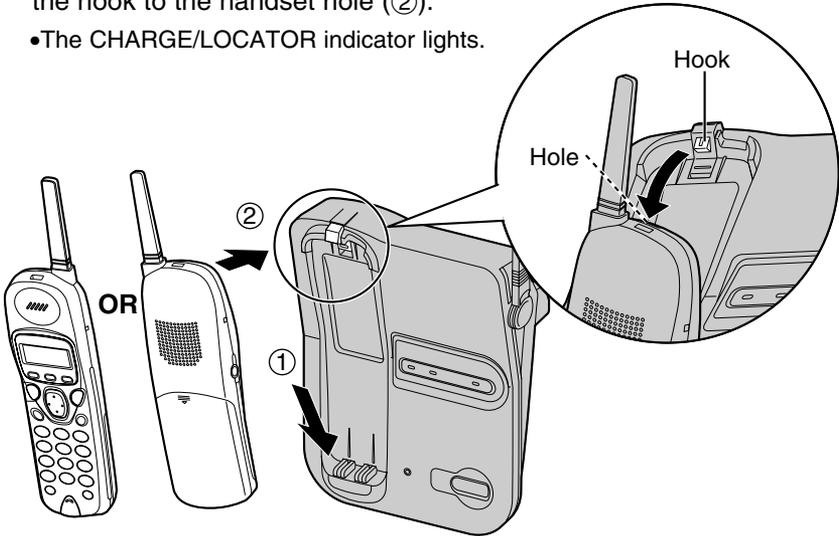

Belt Clip

You can hang the handset on your belt or pocket using the belt clip.

To attach the belt clip

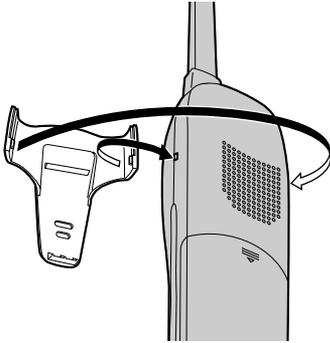

To remove the belt clip





Optional Headset

Plugging an optional headset into the handset allows a hands-free phone conversation. Please use only a Panasonic KX-TCA88 or KX-TCA90 headset. To order, call the accessories telephone number on page 2.

Connecting an optional headset to the handset

Open the headset jack cover, and connect an optional headset to the headset jack as shown below.

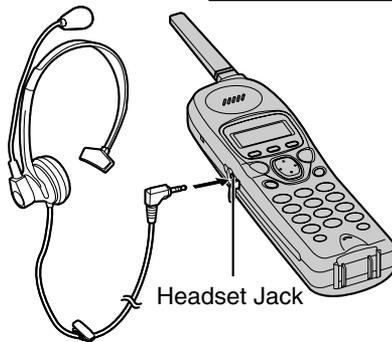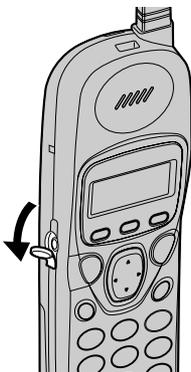


The illustration headset is a KX-TCA88.

To switch to the speakerphone while using the headset:
Press . To return to the headset, press .


Battery Replacement

If “Recharge” is displayed and/or “[■]” flashes after a few telephone calls even if the battery was fully charged, replace the battery with a new Panasonic PQPP511SVC (P-P511) battery. To order, call the accessories telephone number on page 2.

- 1 Press the notch on the handset cover firmly and slide it as indicated by the arrow.

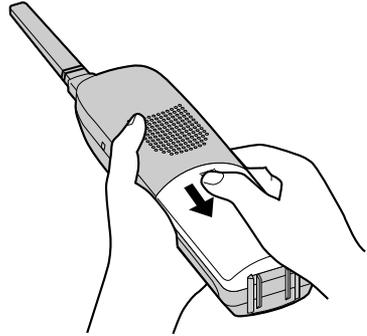

- 2 Remove the old battery. Insert the new battery into the handset as shown, matching the correct polarity (①). Press the battery down until it places into the compartment (②).

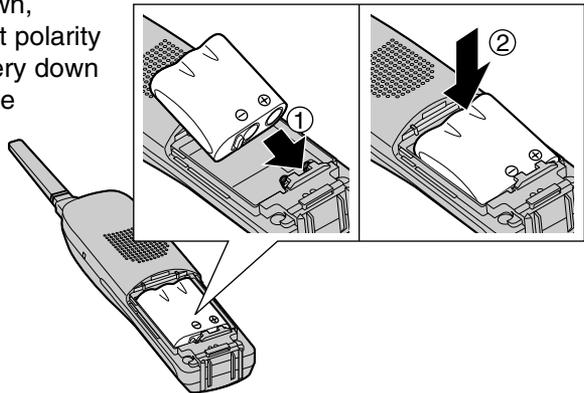


- 3 Close the cover. Make sure you charge the new battery for about 15 hours in order to display the battery strength prompt correctly (p. 15).

A nickel cadmium battery that is recyclable powers the product you have purchased. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.



Adding Another Phone

This unit will not function during a power failure. To connect a standard telephone on the same line, use the Panasonic T-adaptor KX-J66. To order, call the accessories telephone number on page 2.

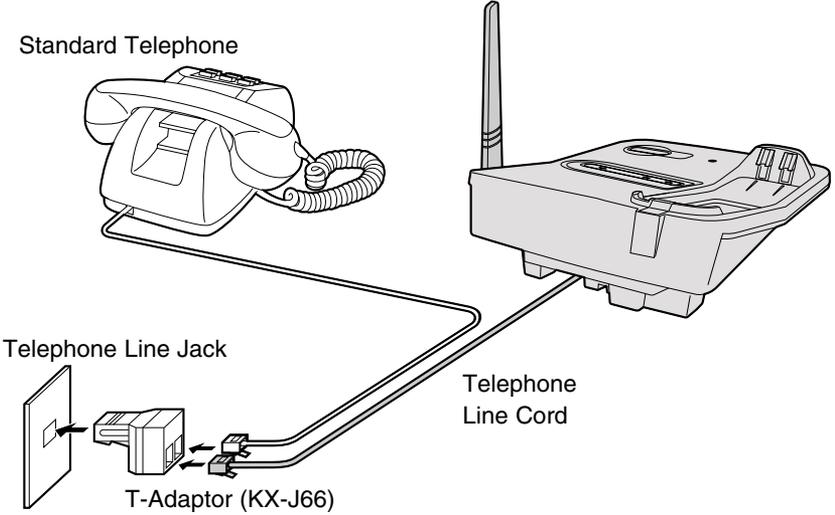



Problem	Cause & Remedy
The unit does not work.	<ul style="list-style-type: none"> •Check the settings (p. 11–17). •Check whether the dialing mode setting is correct (p. 16). •Charge the battery fully (p. 14). •Clean the charge contacts and charge again (p. 15). •Install the battery properly (p. 14). •Place the handset on the base unit and unplug the AC adaptor to reset. Plug in, and try again. •Re-install the battery and place the handset on the base unit (p. 59). Try again.
“No link to base Place on cradle and try again.” is displayed and an alarm tone sounds.	<ul style="list-style-type: none"> •You are too far from the base unit. Move closer and try again. •Place the handset on the base unit and try again. •Plug in the AC adaptor. •Raise the base unit antenna.
Static, sound cuts in/out, fades. Interference from other electrical units.	<ul style="list-style-type: none"> •Locate the handset and the base unit away from other electrical appliances (p. 3). •Move closer to the base unit. •Raise the base unit antenna. •Press  to select a clearer channel in the talk or speakerphone mode.
The unit does not ring.	<ul style="list-style-type: none"> •The ringer volume is set to OFF. Set to HIGH or LOW (p. 20).
The line status indications do not work properly.	<ul style="list-style-type: none"> •Check the settings (p. 11–17). •The line mode selection is incorrect. See page 17.
The handset display is blank.	<ul style="list-style-type: none"> •Charge the battery fully (p. 14).

➔ Troubleshooting

Problem	Cause & Remedy
You cannot program items, such as the dialing mode.	<ul style="list-style-type: none">• Programming is not possible while the unit is in the talk or speakerphone mode, when viewing the Caller List/directory list.• Do not pause for over 60 seconds while programming.• Move closer to the base unit.• , ,  or  may have been pressed when you picked up the handset. Press OFF and try again.
Previously programmed information is erased.	<ul style="list-style-type: none">• If a power failure occurs, programmed information may be erased. Reprogram if necessary.
You cannot store a name and phone number in the directory.	<ul style="list-style-type: none">• You cannot store an item in the directory while the unit is in the talk or speaker mode.• Do not pause for over 60 seconds while storing.
While programming or searching, the unit starts to ring and stops the program/search.	<ul style="list-style-type: none">• To answer the call, press ,  or the called line button. Start again from the beginning after hanging up.
During the conversation, the other line status indication flashes quickly and the display shows another caller's information.	<ul style="list-style-type: none">• Someone is calling you on the other line. To answer, press HOLD/FUNCTION/CLEAR to put the current call on hold. Press the line button whose status indication is flashing quickly on the display (p. 48).
The unit does not display the caller's name and/or phone number.	<ul style="list-style-type: none">• You need to subscribe to a Caller ID service.• Other telephone equipment may be interfering with your phone. Disconnect it and try again.• Other electrical appliances connected to the same outlet may be interfering with the Caller ID information.• Telephone line noise may be affecting the Caller ID information.



Problem	Cause & Remedy
The handset display exits the Caller List.	<ul style="list-style-type: none">•Do not pause for over 60 seconds while searching.
When a second call is received during a conversation, the unit does not display the new caller's name and/or phone number.	<ul style="list-style-type: none">•The line mode selection is incorrect. See page 17.•The caller requested not to send his/her information. See page 28.
You cannot page the handset.	<ul style="list-style-type: none">•The handset is too far from the base unit.•The handset is engaged in an outside call, viewing the Caller List/directory list.
You cannot redial by pressing REDIAL/PAUSE .	<ul style="list-style-type: none">•If the last number dialed was more than 32 digits long, the number will not be redialed correctly.•The button has a double function as either redial or pause. It will redial the last number dialed if pressed at the outset of a call (p. 24). If another number has been dialed first, it will operate as a pause button (p. 51).
"Recharge" is displayed, "{ ■}" flashes or the unit beeps intermittently.	<ul style="list-style-type: none">•Charge the battery fully (p. 14).
You charged the battery fully, but "Recharge" is still displayed and/or "{ ■}" continues to flash.	<ul style="list-style-type: none">•Clean the charge contacts and charge again (p. 15).•Install a new battery (p. 59).
The CHARGE/LOCATOR indicator light does not go out after the battery has been charged.	<ul style="list-style-type: none">•This is normal.

➔ Troubleshooting

Problem	Cause & Remedy
You cannot have a conversation using the headset.	<ul style="list-style-type: none">• Make sure that an optional headset is connected properly (p. 58).•  may have been pressed. If “SP-phone” is displayed on the handset, press  to continue the conversation with the headset.
If you cannot solve your problem	<ul style="list-style-type: none">• Call our customer call center at 1-800-211-PANA(7262).• Panasonic’s e-mail address for customer inquiries: consumerproducts@panasonic.com for customers in the USA or Puerto Rico ONLY

Important Safety Instructions



When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicer when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized servicer when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicer.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

For assistance, please call: 1-800-211-PANA(7262)

Important Safety Instructions

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

- The AC adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is easily accessible.

FCC and Other Information



This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ-----.

If requested, this number must be provided to the telephone company.

Registration No.(found on the bottom of the unit)

Ringer Equivalence No. (REN).....0.2B

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact a Factory Servicenter or other Authorized Servicer. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

FCC and Other Information

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce, or eliminate, interference.

Operating near 2.4GHz electrical appliances may cause interference. Move away from the electrical appliances and/or press the CH (Channel) button.

CAUTION:

To comply with FCC RF exposure requirements, the base unit should be installed with its antenna located at 20 cm or more from persons and handset should be carried with the specific belt-clip provided for the handset to ensure compliance. Other non-tested belt-clips or similar body-worn accessories may not comply, therefore, should be avoided.

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult with your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

- **Environment** — do not place the unit in a room where the temperature is less than 5°C (41°F) or greater than 40°C (104°F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
- **Medical** — consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 2402MHz to 2480MHz, and the power output level can range 0.015 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.
- **Routine care** — wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder. When you leave the unit unused for a long period of time, unplug the AC adaptor from the outlet.
- **If there is any trouble** — disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by a Factory Servicenter or other Authorized Servicer. If the known working phone does not operate properly, consult your telephone company.

Specifications

■ Base unit

Power Supply:	AC Adaptor (120 V AC, 60 Hz)
Power Consumption:	Standby: Approx. 3.2 W Maximum: Approx. 4.1 W
Frequency:	2.41 GHz — 2.48 GHz
Dimensions (H x W x D):	Approx. 84 mm x 180 mm x 215 mm (3 ⁵ / ₁₆ " x 7 ³ / ₃₂ " x 8 ¹⁵ / ₃₂ ")
Mass (Weight):	Approx. 430 g (0.95 lb.)

■ Handset

Power Supply:	Ni-Cd battery (3.6 V, 850 mAh)
Frequency:	2.41 GHz — 2.48 GHz
Dimensions (H x W x D):	Approx. 245 mm x 55 mm x 45 mm (9 ³¹ / ₃₂ " x 2 ⁶ / ₃₂ " x 1 ²⁵ / ₃₂ ")
Mass (Weight):	Approx. 220 g (0.48 lb.)
Security Codes:	1,000,000

■ **Dialing Mode:** Tone (DTMF)/Pulse

■ **Operating Environment:** 5 °C – 40 °C (41 °F – 104 °F)

Specifications are subject to change without notice.

Index

A	C
Accessories 2	Call on hold..... 25
Answering Calls 27	Call Waiting Caller ID 52
Auto talk Feature 19, 27	Call Waiting Tone 52
Automatic Security Code Setting..... 50	Caller ID Number
B	Auto Edit feature 32, 33
Backlit LCD 27	Caller ID service 28, 52
Base Unit Location 3	Caller List
Battery Charge 3, 14	editing 32
Battery information..... 15	erasing..... 35
Battery Replacement 59	storing..... 34
Battery strength 15	viewing..... 29, 30
Belt Clip 58	Calling Back from Caller List 31
	Conference call..... 49

D		P	
Dialing Mode.....	16	PAUSE.....	51
Directory	36	Power failure.....	60
dialing	41	Pulse service	51
editing	42	R	
erasing	43	Redial.....	24
finding	40	Redial list	25
names and symbols	38	Ringer Off	20
storing	36	Ringer Tone.....	21
Display	8	Ringer Volume	20
F		Rotary service, Tone dialing.....	51
FCC and Other Information	67	S	
FLASH Button.....	52	Safety Instructions	65
Flash time	53	Shipping product for service	
Function Menu.....	18Back cover	
H		Specifications.....	70
Handset Locator	50	SP-phone.....	24
Headset, optional	58	T	
Hold alarm	25	Troubleshooting	61
I		V	
Incoming Call Tone.....	55	Voice Mail Service	44
Installation		Volume control.....	26
AC adaptor	11	W	
Adding Another Phone	60	Wall Mounting.....	56
Battery	14		
Telephone Line Cord.....	12, 13		
L			
LCD contrast.....	22		
Lighted Handset Keypad	27		
LINE Buttons	23, 27, 48		
LINE indicators	23, 26, 48		
Line mode.....	17		
Line Selection	54		
Location of controls	6, 7		
M			
Making Calls	23, 24		
Microphone	24, 27		
MUTE.....	51		
N			
Noise.....	3		

For your future reference

Serial No. _____
 (found on the bottom of the unit)

Date of purchase _____

Name and address of dealer _____

For product service

- Call 1-800-211-PANA(7262) for the location of an authorized servicenter.
- Panasonic's e-mail address for customer inquiries:
consumerproducts@panasonic.com
for customers in the USA or Puerto Rico ONLY

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom

- Send the unit to an authorized servicenter, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono sin cordón fue elaborado para uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

**If you need assistance with the set-up or operation,
please call 1-800-211-PANA(7262)**

**Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America**
One Panasonic Way, Secaucus, New Jersey 07094

**Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.**
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park
Carolina, Puerto Rico 00985