

345

1800/722

(800)722-1301

SN 9067 SU-SAN
E+87

Pepper Tree
7772

801 756 9606

MGMT CODE FOR SAK TRee → MGMT CODES
3120
258981

New Area
310

INN-FORM XL™

TELEPHONE CALL ACCOUNTING AND MANAGEMENT SYSTEM

INSTALLATION AND USER GUIDE

Version 12.71

November 1, 1988

TEL electronics, inc.™ reserves the right to add, delete or alter any of the information contained in this document without notice. Furthermore, TEL electronics, inc. makes no warranty on this document, and is not liable for damage or loss which may occur from its use.

WARNING

This equipment generates, uses and can radiate radio frequency energy, and if installed and used in accordance with this manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference; in which case, the user, at his own expense, may be required to take whatever measures are necessary to correct the interference.

TEL electronics, inc.™ is a trademark of TEL electronics, inc.
INN-FORM XL is a trademark of TEL electronics, inc.

© Copyright by TEL electronics, inc. 1988

All rights reserved. No part or parts of this manual may be copied, reproduced, stored in a retrieval system or transcribed in any form or by any means without the express and written permission of TEL electronics, inc. ANY PART OF THIS USER GUIDE OR THE INN-FORM XL SYSTEM MAY CHANGE WITHOUT NOTICE.

TABLE OF CONTENTS (cont.)

PROGRAM 23	ADD EXCHANGE ON-SITE	2-25
PROGRAM 24	PROGRAM TRUNK/ACCESS CODE ON-SITE	2-26
PROGRAM 26	LINE SPAGE, LINES TO TEAR OFF, BAUD RATE, AND TIME FORMAT	2-26
PROGRAM 28	AUTO PRINTING AND CLEARING	2-28
PROGRAM 29	MULTIPLE LEVELS OF MANAGEMENT ACCESS	2-29
PROGRAM 32	PRINT LIST OF CHANGEABLE SMDR PARAMETERS AND RULER LINE	2-32
PROGRAM 33	SET SMDR RELATED PARAMETERS	2-32
C. ALARMS		2-35
1.	GENERAL INFORMATION ABOUT ALARMS	2-35
2.	PRINTER ALARMS (POWER, PAPER, RIBBON, OFF-LINE)	2-35
3.	INN-FORM XL POWER ALARM	2-36
4.	TELEPHONE CALL DATA ALARM	2-36
<u>III.</u>	<u>QUESTIONS & ANSWERS</u>	<u>3-1</u>
A.	COMMON QUESTIONS	3-1
B.	TROUBLESHOOTING	3-2
C.	SERVICE AND MAINTENANCE	3-3
D.	WARRANTY	3-4
<u>IV.</u>	<u>APPENDIX</u>	<u>4-1</u>
	APPENDIX A TECHNICAL INSTALLATION	4-1
A.	INTRODUCTION	4-1
	Step #1 The Product Checklist	4-1
	Step #2 Data Form Check List	4-1

TABLE OF CONTENTS (cont.)

Step #3	Installing and Replacing the Software Module	4-2
Step #4	Connecting the Printer	4-2
Step #5	Connecting the Power	4-4
Step #6	The Printer Test	4-4
Step #7	The Keyboard Test	4-5
Step #8	System Initialization and The Memory Test	4-5
Step #9	Connecting to the Telephone System	4-5
Step #10	The Valid Call Test	4-6
Step #11	Troubleshooting	4-7
Step #12	Final Preparation	4-8
APPENDIX B INITIALIZATION PROCEDURE		4-9
<hr/>		
V.	GLOSSARY	5-1
<hr/>		
VI.	INDEX	6-1
<hr/>		
VII.	COMMENTS	7-1
<hr/>		

TABLE OF FIGURES

Figure 1.	INN-FORM XL System	1-3
Figure 2.	Function Key Letter Assignment Chart	2-13
Figure 3.	Automatic Multiple Report	2-14
Figure 4.	Baud Rate Code Numbers	2-27
Figure 5.	Numbers to Represent Reports	2-28
Figure 6.	Assignment List for Levels of Management Access	2-30
Figure 7.	Changeable SMDR parameters 1 through 47 for Program 33	2-33
Figure 8.	Location of the property data chip	4-2
Figure 9.	Connecting to the switch (SMDR) and the printer	4-3
Figure 10.	Power Transformer Socket	4-4
Figure 11.	Pin Connections	4-7
Figure 12.	Print out of the initialization	4-9

I. GETTING STARTED

A. HOW TO USE THIS MANUAL

This User Guide is designed to help you become comfortable and proficient in using the INN-FORM XL System. A Quick Reference Guide is also provided with the system.

It is strongly recommended that you read this entire user guide in order to become proficient in the operation of the INN-FORM XL. However, this manual is divided into sections to help you access specific information as quickly as possible.

SECTION I.

Getting Started tells you:

- A. How to use the manual.
- B. Introduces you to the INN-FORM XL.
- C. Gives you an idea of what you need to know to use the unit on a daily basis.

SECTION II.

The Reference section is organized for quick retrieval of information. It lists the available reports, the programs in numerical order, and explains the alarms that can occur while using the INN-FORM XL.

SECTION III.

This section contains questions and answers concerning the system and is divided into the following sub-sections:

- A. Common questions and answers.
- B. Troubleshooting.
- C. Service information.
- D. Warranty information.

SECTION IV.

The final section contains the following:

- Appendix A, Technical installation.
- Appendix B, The initialization procedure.

SECTION V.

The Glossary provides definitions of terms used throughout the manual.

SECTION VI.

The Index lists topics and/or words by pages where they are located.