



**AT&T**


**SPIRIT™**  
Communications System  
Model 2448  
Administration Manual

## Table of Contents


Parts of the System	2
Parts of the Telephone Used in Administration	3
Groups and Intercom Extensions	3
How to Use this Manual	4
<hr/>	
SECTION 1: Customizing	5
Description of Features that May be Customized	5
How to Use the System Planner and the Customization Chart	7
System Planner	8
Customization Chart	10
How to Customize	12
Confirmation and Error Tones	12
Instructions for Customizing	13
Kinds of Customization	
System Reset to Factory-Set Values - 0	14
System Customization - 1	15
Telephone Customization - 2	18
System <i>SpeedCall</i> - 3	23
SMDR Call Report - 4	25
Printing Customization Information - 5	27
Example Company	30
<hr/>	
SECTION 2: Additional Information	32
Ringing Options	32
System Changes	32
Using with a PBX System	32
L A Jacks (Dedicated Lines and Power Failures)	32
Optional Accessories, Printers, and Pagers	33
Additional Feature Information	33
<hr/>	
System <i>SpeedCall</i> Directory	35
Intercom Extension and Group Directory	36

## Parts of the System

The SPIRIT™ Communications System, Model 2448, consists of a **CONTROLLER** that controls the system, **TELEPHONES**, and some optional equipment. Outside telephone lines from your local telephone company or from a PBX, or switchboard, system are connected to the controller. The controller is connected to all the telephones in the system.

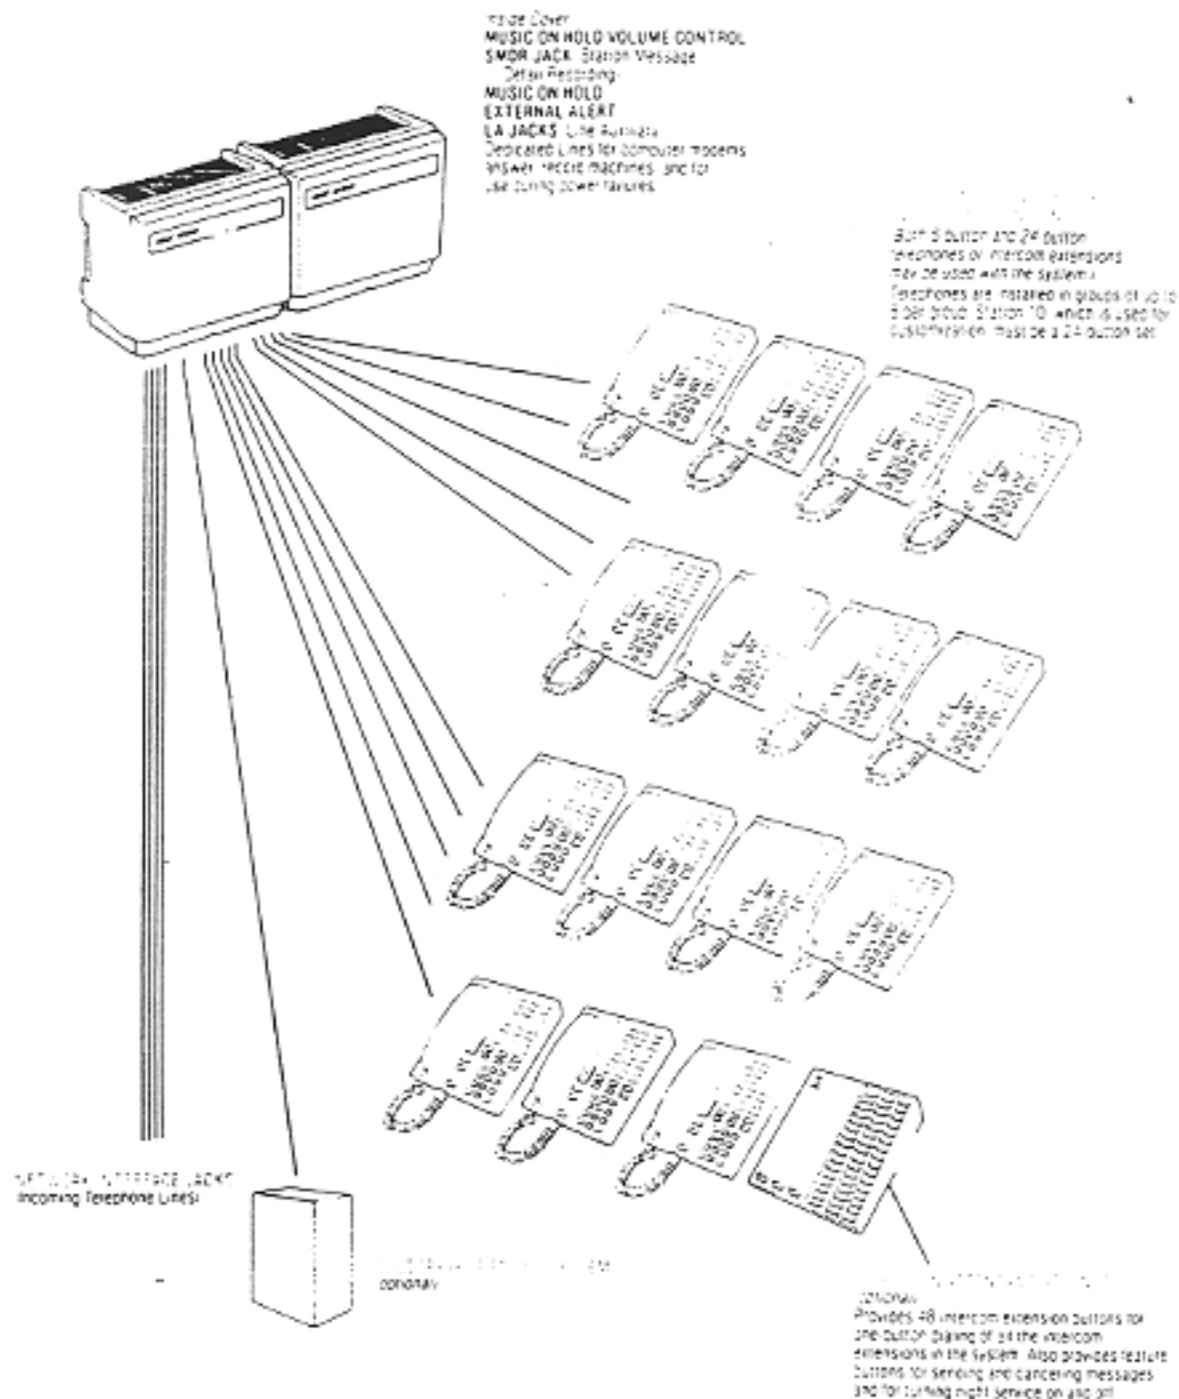

## Parts of the Telephone Used in Administration

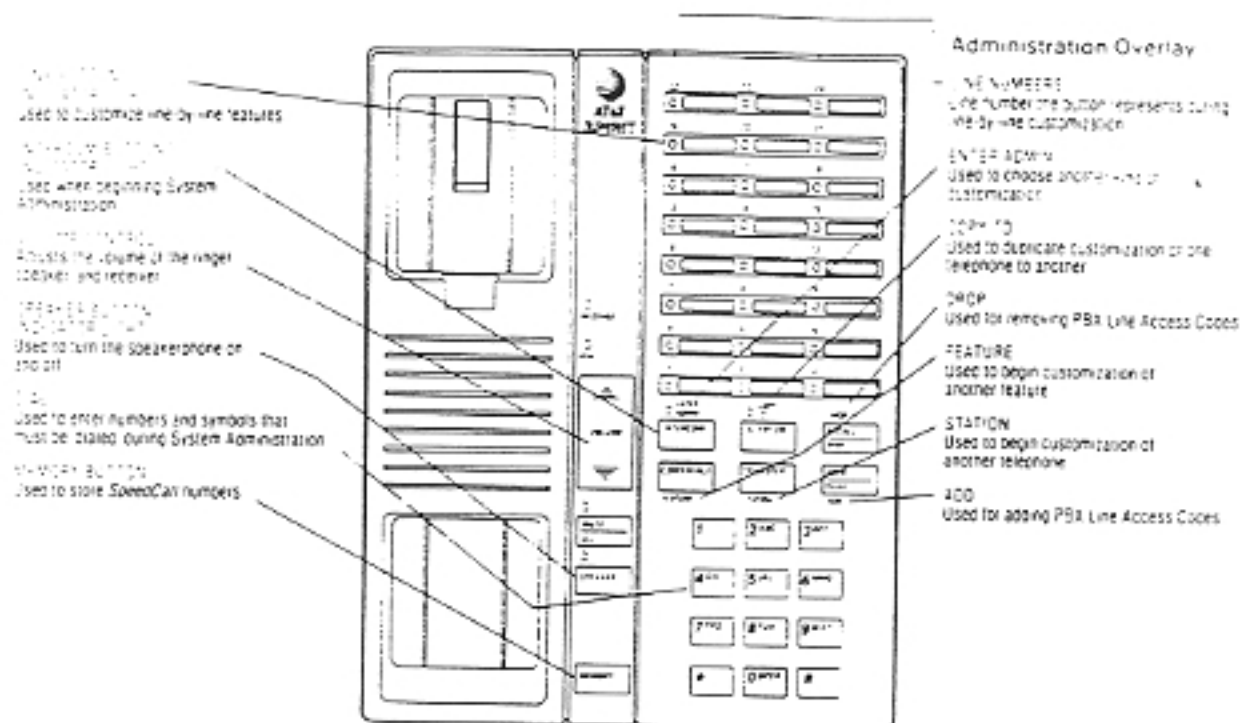

## Groups and Intercom Extensions

Each telephone in the system has a two-digit intercom extension number. The intercom extensions are grouped according to the numbers on the right. Some special features are available to users in a group, such as group paging and picking up a call within a group. Consider carefully how intercom extension numbers are assigned to the people in the system so that the group features are used most efficiently for your company. The numbers do not have to be consecutive; for instance, you may have intercom extensions 10 through 15, 18 through 22, and 28 through 33 in your system, depending on the telephone capacity of your system.

Intercom Extension Numbers	Group Number
10-17	61
18-25	62
26-33	63
34-41	64
42-49	65
50-57	66

**NOTE:** When you assign intercom extension numbers to users, remember that all customization of the system must be done at telephone set 10, and when users dial 0 (zero) using the intercom, they reach intercom extension 10.